 



61 key electronic keyboard

SEK-561S function operation manual

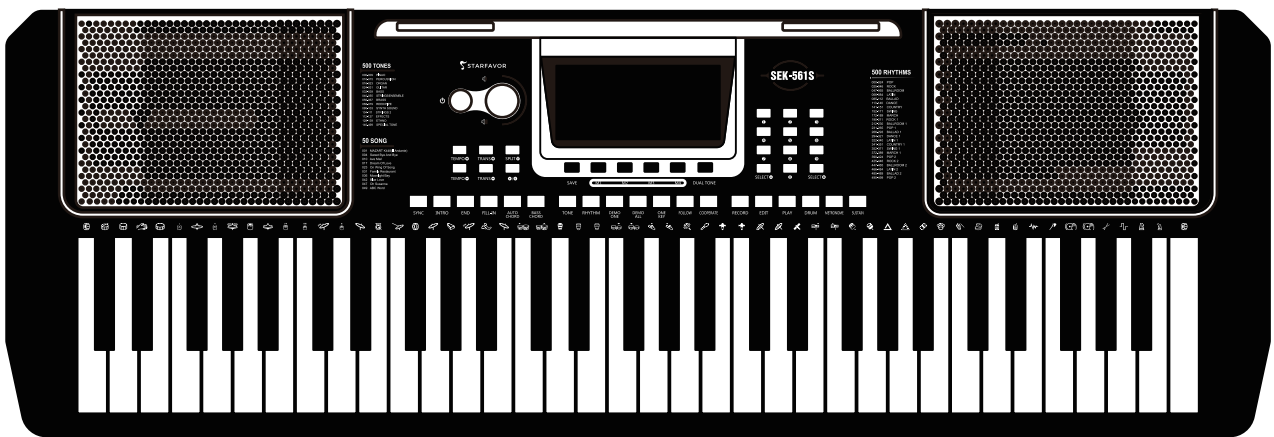

Quick guide to electronic keyboard

 SEK-561S

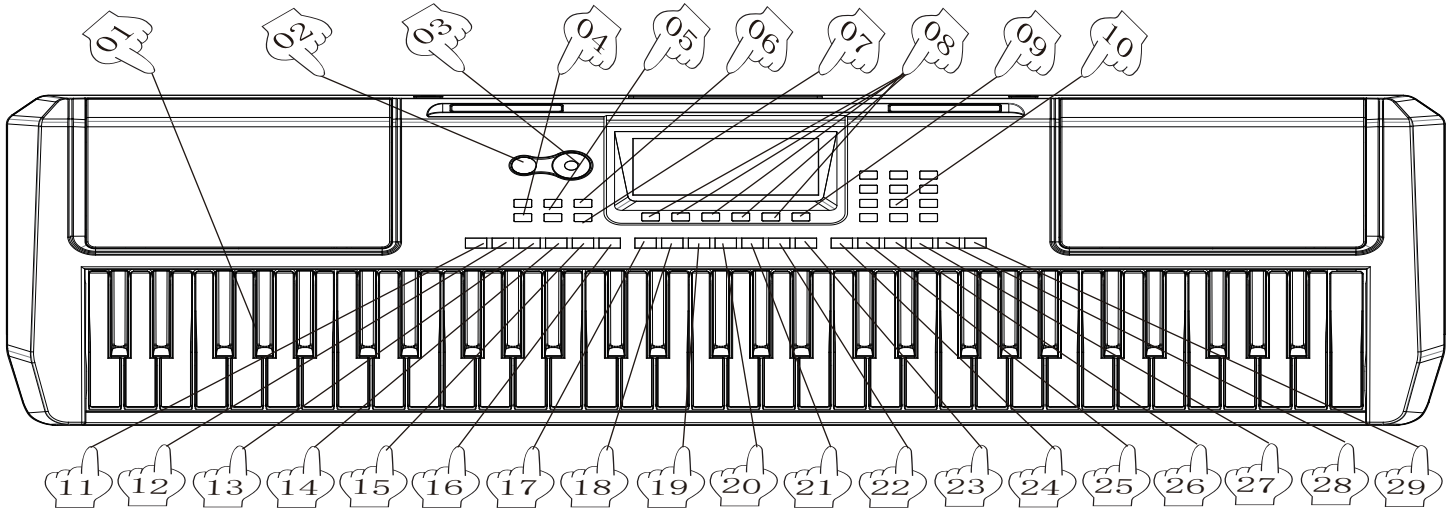

01 KEYBOARD	07 START/STOP	13 END	19 DEMO ONE	25 EDIT
02 POWER	08 SAVE M1-M4	14 FILL-IN	20 DEMO ALL	26 PLAY
03 VOLUME+ -	09 DUAL TONE	15 AUTO CHORD	21 ONE KEY	27 DRUM
04 TEMPO+ -	10 NUMBER	16 BASS CHORD	22 FOLLOW	28 METRONOME
05 TRANS+ -	11 SYNC	17 TONE	23 COOPERATE	29 SUSTAIN
06 SPLIT	12 INTRO	18 RHYTHM	24 RECORD	

Operating instructions

1. Power switch

Turn on the [POWER SWITCH] key to play the "keyboard" and enter the playing state. (Figure 2)

2. Start/stop

Press [START/STOP] to play the rhythm, press the [START/STOP] button for the second time to stop the playing rhythm. (Figure 07)

Exit this mode under the teaching, recording, programming, playing, metronome, demonstration song and other modes.

3. Volume adjustment

When playing or playing songs, rotate the volume control knob to adjust the volume, rotate clockwise to increase the volume, rotate counterclockwise to turn down the volume. (Figure 03)

4. Speed adjustment

You can use the [TEMPO +] and [TEMPO -] keys to select the speed after press the speed key. There are 270 segments (30-300) for speed control and 90 segments (120) for boot default. Press and hold [TEMPO +] and [TEMPO -] to continuously increase/decrease the speed. Speed returns to preset value (120) after rebooting (Fig 04)

5. Sound effect change

Double keyboard: Press the [SPLIT] key for the first time to enable the double keyboard function, press the [SPLIT] key for the second time to cancel the double keyboard function. (Figure 06)

When the dual keyboard function starts, the scales of C2~B3 of the left key will be played as C3~B4, and the scales of C4~C7 of the right key will be played as C3~C6. Use the number key and the [+][-] key to select the main tone, instead of the tone of right key.

Sustain: press the [SUSTAIN] key to prolong the end time of the keys sound. (Figure 29)

Keyboard drum: Press the [DRUM] for the first time to enable the function of keyboard drum, press gain to cancel the function of keyboard drum. After the function of keyboard drum is turned on, the corresponding drum sound will be played when you play the keys. (Figure 27)

Dual tone: Press the [DUAL TONE] key for the first time to turn on the function of dual tone, and press again to turn off the function of dual tone. You can use the numeric keys and [+][-] keys to choose the main tone. When the function of double keyboard is enabled, both primary and secondary tones sound. (Figure 09)

Transposition: Use [TRANS+][TRANS-] to control the transposition. There are 13 sections (-6~6) of the transposition control, and the starting preset is the 7th section. (Figure 05)

Insert: When the rhythm is playing, press the [FILL-IN] key to insert percussion or drum sounds. (Figure 14)

6. Tone select

Press [TONE] key to select the tone, use the available digital selection and red to select the tone. (Figure 17)

7. Rhythm select

Press the [START/STOP] key first, and then press the [RHYTHM] key to enter the state of selecting rhythm use [0-9] numeric keys to input rhythm code directly. (Figure 7) (Figure 18) (Figure 10)

Use [SELECT+] [SELECT-] to change the rhythm code in order. (Figure 7) (Figure 10)

8. Automatic accompaniment mode

Sync: Press [SYNC] key the first time to enter the synchronization mode, and press [SYNC] key the second time to exit the synchronization mode. When entering synchronous mode, stop playing the rhythm and press the first 19 keys to play the selected rhythm (chord) automatically. (Figure 11)

For chord synchronization, please refer to the instructions of single finger accompaniment or multi finger accompaniment.

Prelude: Press the [PRELUDE] key to play the prelude, which can be used with rhythm synchronization, insertion and chord. (Figure 12)

Ending: Press the [END] key to play the ending, which can be used with rhythm synchronization, insertion and chord. (Figure 13)

Comprehensive chords: Press the [AUTO CHORD] key for the first time to enter the mode of comprehensive chord, press again to exit the mode of comprehensive chord. When the rhythm is playing, press the [AUTO CHORD] key and press the corresponding multi-fingering chord within the range of keys C2~F3#. Accompaniment, if not multi-fingered, will play a single fingered chord. (Figure 15)

For detailed fingering for comprehensive chord accompaniment, refer to the single-finger, multi-finger and chord tables, can be used with rhythm/chord/synchronization.

Bass chords: Change the tone of chord from Bass to Piano. (Figure 16)

9. Recording and playback function

Recording: Press the [RECORD] key to enable the recording function and press again to disable the recording function. In recording mode, you can play the keys or drums at will and the system starts recording. The maximum number of recordings is 700.

When the record is full, it can't continue to record another one. When recording, you can press the [PLAY] key to play the recorded notes or drums at any time. (Figure 24) (Figure 26)

Playback: Press the [PLAY] key to play back the recording.

10. Programming and playback functions

Rhythm programming function: Press [EDIT] key to perform rhythm programming function, In the programming mode, the keys are converted automatically into keyboard drums, when the program is full, the keys are restored automatically.

The maximum number of programs is 128, when the program is full, a drum can't be recorded; you can press the [Play] key at any time to play the recorded drum sound when programming. (Figure 25) (Figure 26)

11. Metronome

Press the [METRONOME] key to sound the beat, there are four variations of metronome sounds, step by step from 1/4 to 2/4 to 3/4 to 4/4 to stop to 1/4....., the default startup value is 120. (Figure 28)

Press the [METRONOME] key to switch on or off the metronome sound when recording.

Press the [METRONOME] key to switch on or off the metronome sound when programming.

12. Memory function

1. Memory function: (Figure 08)

A total of 4 groups of memory functions, memory tone, rhythm, song, speed, chord and so on. Press [Memory key] and [Memory 1] ~ [Memory 4] at the same time to memorize.

Press [Memory 1] to [Memory 4] alone to restore the remembered informations.

2. Memory initialization timbre

Memory number:

1. Honky-tonk Piano
2. Electric Piano
3. Bright sound piano
4. Electric Grand Piano

3. Memory initialization rhythm

Memory number:

1. 16 beat pop
2. 18 beat pop
3. 8 beat soul music
4. 8 beat rock

13. Demo

Dome one function: Press the [DEMO ONE] key to open the dot sing function of demonstration song, can carry on performance movement of demonstration song, (Figure 19), you can press [0-9] or [+ , -] keys to select demo pieces, (Figure 10), repeat automatically the song when the demo song is over, press the [DEMO ONE] key again to stop playing the demo song

DOME ALL function: Press the [DEMO ALL] key to open the right function of demonstration song, can carry on performance movement of demonstration song, the system start playing the first song automatically. (Figure 20), According to [0-9] number key or [+ , -] key to select demo pieces (Figure 10), when a demo song is over, the next song will play automatically, After playing all the songs, from the beginning to play. Press the [DEMO ALL] key again to stop the demo song.

14. Model of teaching

There are three teaching modes: [One key/Follow and Cooperate]

Press the [ONE KEY] to enter the single-key mode, and press again to exit the single-key mode, after entering the single key mode, use the current song to teach, when the user presses the keys at will, the key is the main melody, If the theme doesn't reach the next bar, the background note repeats that bar until the end of the song. (Figure 21)

Press the [FOLLOW] key to enter the following mode, Press again to exit the following mode, after entering the following mode, use the current song to teach, after the song is played, the main melody is not played. You must press the corresponding key according to the note displayed on the screen to play the next note, the background music repeats the bar until the song stops. (Figure 22)

Press the [COOPERATE] key to enter the ensemble mode, and press again to exit the ensemble mode, after entering the ensemble mode, use the current song to teach, after the song is played, the user can play the keys at will and break the theme,

If you don't press the key again after 5 seconds, the theme will resume playing by itself. The background sound is played in full and the teaching is repeated after the song ends. (Figure 23)

1、Battery



warning

Improper use of the battery will lead to liquid leakage, corrosion or explosion of the parts around the battery, which may lead and personal damage. The following precautions must be strictly observed.

- Do not attempt to disassemble or short circuit the battery and do not charge it.
- Do not expose it to fire or burn it in fire.
- Do not mix old and new batteries, do not mix different types of batteries.
- The positive (+) and negative (-) of the battery must be installed in the correct direction.
- If you don't use it for a long time, please remove the battery from the keyboard.

2、Abnormal situation



warning

- When the electronic organ smokes, gives off peculiar smell or overheats, it is dangerous to cause fire and electric shock if it is used continuously. In this case, the following operations should be performed immediately.

Appendix

 
1. Turn off the power.
2. If you are using an AC transformer for power supply, unplug it from a wall outlet.
3. Contact your dealer.

- Long term use of AC transformer will make it hot, which is a normal phenomenon and does not mean failure.
- The built-in function of this piano is huge, sometimes it can't react. Please turn off the power switch and then turn it on to work normally.


3. Install the battery

1. Withdraw the screw and remove the battery cover.
2. Install four 1.5V "AA" batteries into the battery slot in the positive (+) negative (-) direction of the battery.
3. Insert the battery cover into the original position and lock the screw after covering.

Single finger chord table

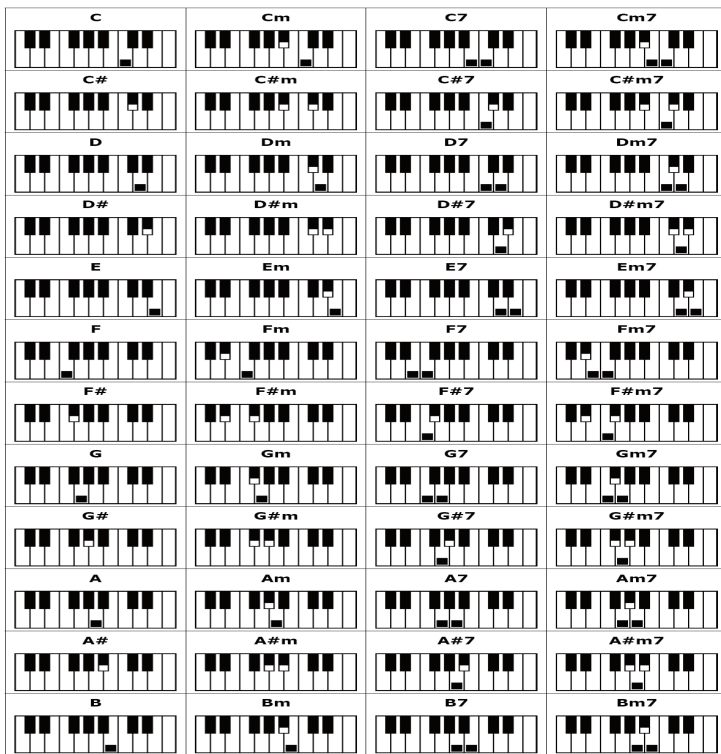

Multi finger chord table

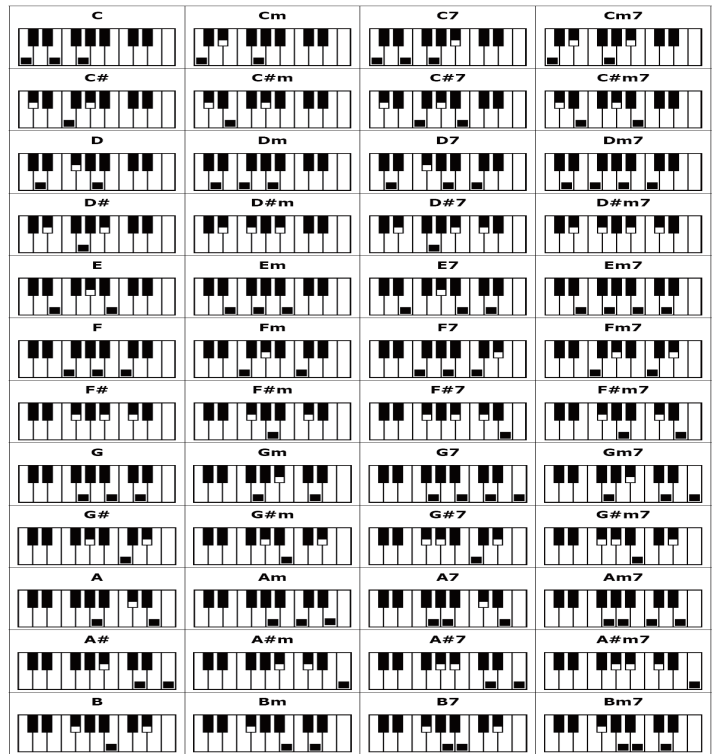 

50 Demonstration songs

S000	MOZART K448 (Il Andante)	S013	Solfeggietto	S026	Chopin Revolution Etude	S039	Tea for Two
S001	Arabesque No.1	S014	Fantasy Impromptu	S027	Musical Moments	S040	Toot Toot Toosie Goodbye
S002	Sonate Fur Klavier Nr.14 Mondschein	S015	Chopin Tristeza	S028	Dance Of Little Four Swans	S041	A Comme Amour
S003	Grand Valse Brillante,op.18	S016	Menuet In G Major	S029	Schumann Reverie	S042	Blue Love
S004	Sweet Bye And Bye	S017	Dream Of Love	S030	1900's Madness	S043	Casablanca
S005	Barcarole	S018	Minuet From LArlesienne	S031	Family Restaurant	S044	Western Doll Dances With Little Bear
S006	Military Marches	S019	Jaydn	S032	To Flush Waves Johnny	S045	O Christmas Santa Claus
S007	Burgmüller Pastorale	S020	Fountain	S033	Zimbada hand	S046	When The Saints Go Marchin In
S008	Voice Of Spring	S021	Haydn Little Serenade	S034	We Wish You A Merry Christmas	S047	Oh Susanna
S009	The Maiden's Prayer	S022	The Flight of the Bumble-Bee	S035	Six Little Ducks	S048	Moon River
S010	Ave Mari	S023	On Wings Of Song	S036	Moonlight Bay	S049	ABC Word
S011	Schubert Serenade	S024	Clementi Sonata	S037	Crazy Arms		
S012	Waltz Of The Flowers	S025	Johann Sebastian Bach	S038	Before the Next TearDrop Falls		

Appendix

500 Tones

T00	Acoustic Grand Piano	T84	Lead 5 (charang)	T168	Shamisen 2	T252	Soft Accord 2	T336	Mute Barafon 6	T420	Synth Harpsi. 10
T01	Bright Acoustic Piano	T85	Lead 6 (voice)	T169	Koto 3	T253	Attack Harp 4	T337	Soft Guitar 6	T421	Soft Sax 9
T02	Electric Grand Piano	T86	Lead 7 (fifths)	T170	Hard Vibe 2	T254	Viola Attack 2	T338	Kawala 6	T422	Soft Clav. 5
T03	Honky-tonk Piano	T87	Lead 8 (bass+lead)	T171	Twin Bones	T255	Kawala 3	T339	Hard Barsoon 6	T423	Bodhran 5
T04	Rhodes Piano	T88	Pad 1 (new age)	T172	Synth Harpsi. 1	T256	Soft Sax 4	T340	Suona 4	T424	Bari & Tenor 5
T05	Chorused Piano	T89	Pad 2 (warm)	T173	Attack Clav. 1	T257	Jazz Organ 2	T341	Castanets 4	T425	Soft Guitar 9
T06	Harpischord	T90	Pad 3 (polysynth)	T174	Chorus Guitar.	T258	Nay 2	T342	Attack Harp 6	T426	Didgeridoo 9
T07	Clavichord	T91	Pad 4 (choir)	T175	Steel Bell 2	T259	Mute Barafon 3	T343	Soft Sax 6	T427	Mute Barafon 9
T08	Celesta	T92	Pad 5 (bowed)	T176	Tsugaru	T260	Dulcimer 4	T344	Shanai 5	T428	Nay 5
T09	Glockenspiel	T93	Pad 6 (metallic)	T177	Oct Harp	T261	Xylophone 4	T345	English Horn 5	T429	Soft Santur 5
T10	Music box	T94	Pad 7 (halo)	T178	Synth Harpsi. 2	T262	Tron Flute 2	T346	Shamisen 5	T430	Kawala 9
T11	Vibraphone	T95	Pad 8 (sweep)	T179	Attack Clav. 2	T263	Hard Barsoon 3	T347	Kalimba 7	T431	Soft Guitar 10
T12	Marimba	T96	FX 1 (rain)	T180	Soft Santur	T264	Mute Barafon 4	T348	Steel Bell 7	T432	Mute Barafon 10
T13	Xylophone	T97	FX 2 (soundtrack)	T181	Dual Horns 1	T265	Soft Guitar 4	T349	Tenor Sax 5	T433	Tron Flute 5
T14	Tubular Bell	T98	FX 3 (crystal)	T182	Bodhran	T266	Kawala 4	T350	Chorus Guitar. 4	T434	Kawala 10
T15	Dulcimer	T99	FX 4 (atmosphere)	T183	Tubular Bells 2	T267	Hard Barsoon 4	T351	Steel Bell 8	T435	Soft Accord 5
T16	Drawbar Organ	T100	FX 5 (brightness)	T184	Suona	T268	Dual Horns 4	T352	Organ Flute 4	T436	Wind Organ 5
T17	Percussive Organ	T101	FX 6 (goblins)	T185	Castanets	T269	Didgeridoo 4	T353	Reed Horn 4	T437	Kalimba 10
T18	Rock Organ	T102	FX 7 (echoes)	T186	Attack Harp 1	T270	Steel Bell 5	T354	Hard Vibe 5	T438	Shamisen 7
T19	Church Organ	T103	FX 8 (sci-fi)	T187	Electric Vpraphone	T271	Kalimba 5	T355	Twin Bones 4	T439	English Horn 7
T20	Reed Organ	T104	Sitar	T188	Soft Sax 1	T272	Church Bells 2	T356	Synth Harpsi. 8	T440	Shanai 7
T21	Accordion	T105	Banjo	T189	Soft Clav.	T273	Celesta 3	T357	Attack Clav. 7	T441	Soft Sax 10
T22	Harmonica	T106	Shamisen	T190	Soft Accord	T274	Clav 3	T358	Koto 7	T442	Didgeridoo 10
T23	Tango Accordion	T107	Koto	T191	Wind Organ	T275	Indian Flute 2	T359	Xylophone 5	T443	Tenor Sax 7
T24	Acoustic Guitar (nylon)	T108	Kalimba	T192	Viola Attack	T276	Jungle Bass 3	T360	Didgeridoo 7	T444	Koto 10
T25	Acoustic Guitar (steel)	T109	Bagpipe	T193	Bari & Tenor	T277	Bright String 2	T361	Attack Barafon 4	T445	Synth Harpsi. 11
T26	Electric Guitar (jazz)	T110	Fiddle	T194	Soft Guitar 1	T278	Slow Violin 2	T362	Attack Harp 7	T446	Organ Flute 6
T27	Electric Guitar (clean)	T111	Shanai	T195	Grow Guitar	T279	Guitar Pinch 3	T363	Electric Vpraphone 4	T447	Synth Harpsi. 12
T28	Electric Guitar (muted)	T112	Tinkle Bell	T196	Didgeridoo 1	T280	Bag Pipe 4	T364	Attack Clav. 8	T448	Woodblock 7
T29	Overdriven Guitar	T113	Agogo	T197	Attack Barafon	T281	Crystal 3	T365	Crystal 4	T449	Xylophone 7
T30	Distortion Guitar	T114	Steel Drums	T198	Mute Barafon 1	T282	Koto 5	T366	Bag Pipe 5	T450	Soft Santur 6
T31	Guitar Harmonics	T115	Woodblock	T199	Nay	T283	Reed Organ 4	T367	Barafon 4	T451	Bag Pipe 7
T32	Acoustic Bass	T116	Taiko Drum	T200	Didgeridoo 2	T284	Dulcimer 5	T368	Soft Santur 4	T452	Crystal 6
T33	Electric Bass(finger)	T117	Melodic Tom	T201	Dual Horns 2	T285	Marimba 4	T369	Dual Horns 7	T453	Soft Guitar 11
T34	Electric Bass (pick)	T118	Synth Drum	T202	Hard Barsoon 1	T286	Shanai 4	T370	Wind Organ 4	T454	Soft Clav. 6
T35	Fretless Bass	T119	Reverse Cymbal	T203	Kawala 1	T287	Electric Gtiutar (Clean) 4	T371	Bari & Tenor 4	T455	Soft Sax 11
T36	Slap Bass 1	T120	Guitar Fret Noise	T204	Soft Guitar 2	T288	Woodblock 4	T372	Tsugaru 4	T456	Bodhran 6
T37	Slap Bass 2	T121	Breath Noise	T205	Mute Barafon 2	T289	Tenor Sax 4	T373	Oct Harp 4	T457	Tsugaru 6
T38	Synth Bass 1	T122	Seashore	T206	Hard Barsoon 2	T290	Twin Bones 3	T374	Bodhran 4	T458	Chorus Guitar. 6
T39	Synth Bass 2	T123	Bird Tweet	T207	Tron Flute	T291	Hard Vibe 4	T375	Tubular Bells 5	T459	Kawala 11
T40	Violin	T124	Telephone Ring	T208	Kawala 2	T292	Koto 6	T376	Soft Sax 7	T460	Soft Sax 12
T41	Viola	T125	Helicopter	T209	Jazz Organ	T293	Shamisen 4	T377	Soft Clav. 4	T461	Nay 6
T42	Cello	T126	Applause	T210	Synth Harpsi. 3	T294	Electric Giutar (Clean) 5	T378	Soft Guitar 7	T462	Mute Barafon 11
T43	Contrabass	T127	Gunshot	T211	Woodblock 3	T295	English Horn 4	T379	Grow Guitar 4	T463	Didgeridoo 11
T44	Tremolo Strings	T128	Yong Gin	T212	Tenor Sax 3	T296	Reed Horn 3	T380	Hard Barsoon 7	T464	Soft Accord 6
T45	Pizzicato Strings	T129	Zheng	T213	Steel Bell 3	T297	Kalimba 6	T381	Tron Flute 4	T465	Tron Flute 6
T46	Orchestral Harp	T130	Zhong Ruan	T214	Kalimba 4	T298	Organ Flute 3	T382	Mute Barafon 7	T466	Mute Barafon 12
T47	Timpani	T131	Pi Pa	T215	Shamisen 3	T299	Barafon 3	T383	Nay 4	T467	Soft Guitar 12
T48	String Ensemble 1	T132	Big Souna	T216	English Horn 3	T300	Dual Horns 5	T384	Jazz Organ 4	T468	Kawala 12
T49	String Ensemble 2	T133	Souna	T217	Shanai 3	T301	Soft Santur 3	T385	Soft Sax 8	T469	Didgeridoo 12
T50	Synth Strings 1	T134	Er Hu	T218	Soft Sax 2	T302	Attack Clav. 5	T386	Kawala 7	T470	Bari & Tenor 6
T51	Synth Strings 2	T135	Yue Hu	T219	Attack Harp 2	T303	Synth Harpsi. 5	T387	Viola Attack 4	T471	Wind Organ 6
T52	Choir Aahs	T136	Di Zi	T220	Castanets 2	T304	Oct Harp 3	T388	Attack Harp 8	T472	Soft Guitar 13
T53	Voice Oohs	T137	Bong Di	T221	Suona 2	T305	Tsugaru 3	T389	Soft Accord 4	T473	Grow Guitar 5
T54	Synth Voice	T138	Koto	T222	Xylophone 3	T306	Steel Bell 6	T390	Guitar Pinch 4	T474	Didgeridoo 13
T55	Orchestra Hit	T139	Qu Di	T223	Koto 4	T307	Chorus Guitar. 3	T391	Indian Flute 3	T475	Attack Barafon 5
T56	Trumpet	T140	Xylophone 2	T224	Attack Clav. 3	T308	Attack Clav. 6	T392	Bright String 3	T476	Mute Barafon 13
T57	Trombone	T141	Dulcimer 2	T225	Synth Harpsi. 4	T309	Synth Harpsi. 6	T393	Church Bells 3	T477	Nay 7
T58	Tuba	T142	Guitar Pinch 2	T226	Twin Bones 2	T310	Wind Organ 3	T394	Didgeridoo 8	T478	Didgeridoo 14
T59	Muted Trumpet	T143	Slow Violin	T227	Hard Vibe 3	T311	Soft Accord 3	T395	Dual Horns 8	T479	Dual Horns 9
T60	French Horn	T144	Bright String	T228	Reed Horn 2	T312	Soft Clav. 3	T396	Hard Barsoon 8	T480	Hard Barsoon 9
T61	Brass Section	T145	Jungle Bass 2	T229	Organ Flute 2	T313	Soft Sax 5	T397	Kawala 8	T481	Kawala 13
T62	Synth Brass 1	T146	Indian Flute	T230	Steel Bell 4	T314	Electric Vpraphone 3	T398	Soft Guitar 8	T482	Soft Guitar 14
T63	Synth Brass 2	T147	Clavi 2	T231	Chorus Guitar. 2	T315	Attack Harp 5	T399	Mute Barafon 8	T483	Mute Barafon 14
T64	Soprano Sax	T148	Celesta 2	T232	Dual Horns 3	T316	Castanets 3	T400	Woodblock 6	T484	Hard Barsoon 10
T65	Alto Sax	T149	Church Bells	T233	Soft Santur 2	T317	Suona 3	T401	Electric Giutar (Clean) 6	T485	Tron Flute 7
T66	Tenor Sax	T150	Kalimba 2	T234	Barafon 2	T318	Tubular Bells 4	T402	Shanai 6	T486	Kawala 14
T67	Baritone Sax	T151	Steel Bell 1	T235	Bag Pipe 3	T319	Bodhran 3	T403	Marimba 5	T487	Jazz Organ 5
T68	Oboe	T152	Tenor Sax 2	T236	Crystal 2	T320	Dual Horns 6	T404	Koto 8	T488	Synth Harpsi. 13
T69	English Horn	T153	Woodblock 2	T237	Attack Clav. 4	T321	Didgeridoo 6	T405	Xylophone 6	T489	Woodblock 8
T70	Bassoon	T154	Electric Giutar (Clean) 2	T238	Electric Vpraphone 2	T322	Nay 3	T406	Tenor Sax 6	T490	Tenor Sax 8
T71	Clarinet	T155	Shanai 2	T239	Attack Harp 3	T323	Mute Barafon 5	T407	Organ Flute 5	T491	Steel Bell 9
T72	Piccolo	T156	Marimba 3	T240	Attack Barafon 2	T324	Attack Barafon 3	T408	Kalimba 8	T492	Kalimba 11
T73	Flute	T157	Dulcimer 3	T241	Didgeridoo 3	T325	Didgeridoo 5	T409	English Horn 6	T493	Shamisen 8
T74	Recorder	T158	Reed Organ 3	T242	Grow Guitar 2	T326	Guitar Pinch 5	T410	Electric Giutar (Clean) 7	T494	English Horn 8
T75	Pan Flute	T159	Koto 2	T243	Soft Guitar 3	T327	Soft Guitar 5	T411	Shamisen 6	T495	Shanai 8
T76	Bottle Blow	T160	Crystal	T244	Soft Clav. 2	T328	Bari & Tenor 3	T412	Koto 9	T496	Soft Sax 13
T77	Shakuhachi	T161	Bag Pipe 2	T245	Soft Sax 3	T329	Viola Attack 3	T413	Kalimba 9	T497	Attack Harp 9
T78	Whistle	T162	Barafon	T246	Tubular Bells 3	T330	Woodblock 5	T414	Barafon 5	T498	Castanets 5
T79	Ocarina	T163	Organ Flute	T247	Bodhran 2	T331	Synth Harpsi. 7	T415	Chorus Guitar. 5	T499	Suona 5
T80	Lead 1 (square)	T164	Kalimba 3	T248	Oct Harp 2	T332	Jazz Organ 3	T416	Tsugaru 5		
T81	Lead 2 (sawtooth)	T165	Reed Horn	T249	Tsugaru 2	T333	Kawala 5	T417	Synth Harpsi. 9		
T82	Lead 3 (calliope lead)	T166	English Horn 2	T250	Bari & Tenor 2	T334	Tron Flute 3	T418	Crystal 5		
T83	Lead 4 (chiff lead)	T167	Electric Giutar (Clean) 3	T251	Wind Organ 2	T335	Hard Barsoon 5	T419	Bag Pipe 6		

Appendix

500 Rhythms

T00	Club Pop	T84	Carnival	T168	Swing Fox	T252	EP Ballad	T336	6-8 Orchestral	T420	Guitar Serenade2
T01	16 Beat Pop	T85	Slow Rock 1	T169	Slow Fox	T253	Power Ballad	T337	Schlager Shuffle	T421	Organ Ballad2
T02	8 Beat Pop	T86	Slow Rock 2	T170	Organ Cha Cha	T254	Guitar Ballad	T338	Schlager Pop	T422	Pop Ballad2
T03	8 Beat Soul	T87	Slow Rock 3	T171	Organ Quick Step	T255	New R&B Ballad	T339	Schlager Rumba	T423	Norteno2
T04	8 Beat Rock	T88	Slow Soul	T172	Ober Polka	T256	Guitar Serenade	T340	Euro Pop Organ	T424	Retro Pop2
T05	Rap Pop	T89	8 Beat Adria	T173	Polka Pop	T257	Organ Ballad	T341	70's French Hit	T425	Trance Pop2
T06	Pop Rock	T90	Classic Piano	T174	Blue Grass 1	T258	Pop Mambo	T342	Italian Mazurka	T426	Pop Gtr Ballad
T07	60's Soul	T91	Unplugged	T175	Blue Grass 2	T259	Latin Party Pop	T343	Jig2	T427	Ibiza 2002
T08	70's Soul	T92	Pop Ballad	T176	Blue Grass 3	T260	80's Pop	T344	Hawaiian2	T428	Chillout Cafe
T09	Funk	T93	Pop New Age	T177	Pop Waltz	T261	British Pop2	T345	Latin Rock2	T429	70's Glam Piano
T10	16 Beat Shuffle	T94	8 Beat Modern	T178	USA March	T262	70's Chart Ballad	T346	Schlager Samba1	T430	French House
T11	Twist	T95	Country Ballad	T179	Hully Gully	T263	Romantic Ballad	T347	Schlager Samba2	T431	Bhajan2
T12	British Pop	T96	Love Song	T180	Tarantella	T264	90's Cool Ballad	T348	Scand Slow Rock	T432	16 Beat Pop3
T13	Hard Rock	T97	Modern Country	T181	Limbo Rock	T265	Alp Ballad1	T349	Schlager 6-8	T433	16 Beat Pop4
T14	Fusion	T98	Electro Pop	T182	Swing Waltz	T266	Alp Ballad2	T350	Schlager Fox	T434	Enka2
T15	FunkShuffl	T99	Acoustic Ballad	T183	Pub Piano	T267	Schlager Polka	T351	Country Ballad	T435	Blues Rock
T16	FusionShuffl	T100	Piano Ballad	T184	Jazz Waltz 1	T268	J-Pop Hit	T352	Country Two Step	T436	Ibiza 2004
T17	Classic 8Beat	T101	R&B Ballad	T185	Jazz Waltz 2	T269	Detroit Pop1	T353	Kool Shuffle	T437	60's Rock & Roll2
T18	Vintage Gtr Pop	T102	Rock Ballad	T186	Show Tune	T270	Detroit Pop2	T354	Easy Country	T438	Acoustic Rock2
T19	Schlager Italia	T103	Slow & Easy	T187	Polka	T271	Worship Med	T355	Country Hits	T439	Club Pop3
T20	50's Pop	T104	Analog Ballad	T188	Party Polka	T272	Worship Fast	T356	Country 8 Beat	T440	Power Rock2
T21	Cool Pop	T105	E. Ballad	T189	Schlager Polka	T273	12-8 Ballad	T357	Mod Cntry Bld1	T441	Rock'n Roll 3
T22	Groovy Pop	T106	80's EP Ballad	T190	China1	T274	Norteno	T358	Country Ballad2	T442	Cool8 Beat2
T23	60's Vintage Pop	T107	80's Boy Band	T191	China2	T275	60's 8 Beat	T359	Scand Country1	T443	British Pop3
T24	80's Pop	T108	70's Chart Ballad	T192	China3	T276	Laff	T360	Scand Country2	T444	British Pop4
T25	Rock'n Roll 1	T109	Romantic Ballad	T193	China4	T277	Ober Walzer	T361	Country Ballad2	T445	8 Beat Soul3
T26	Rock'n Roll 2	T110	90's Cool Ballad	T194	China5	T278	Bhangra	T362	Orch Big Band2	T446	Brit Pop2
T27	Straight Rock	T111	Alp Ballad1	T195	China6	T279	Zouk	T363	Big Band Fast2	T447	Brit Rock Pop2
T28	Jazz Rock	T112	Alp Ballad2	T196	China7	T280	German March	T364	Midnight Swing	T448	Blueberry Blues2
T29	FastGospel	T113	Techno 1	T197	China8	T281	Enka	T365	Fusion2	T449	Guijira2
T30	FolkRock	T114	Techno 2	T198	China9	T282	Bolero Lento	T366	Funk Shuffl 2	T450	Rock Ballad2
T31	RockBilly	T115	Funky Disco	T199	China10	T283	Sherif fReggae	T367	Fusion Shuffl 2	T451	Soul2
T32	RockBoogie	T116	Saturday Night	T200	Hard Rock2	T284	Beguine	T368	Swing Fox	T452	Classic 8Beat2
T33	RockChaCha	T117	Club Latin	T201	60's RockN	T285	Pop Classics	T369	Slow Fox	T453	Bolero2
T34	RockClassical	T118	Disco Chocolate	T202	Standard Rock	T286	Live 8 Beat	T370	Organ Cha Cha	T454	Soul Brothers2
T35	RockShuffle	T119	Disco Fox	T203	Brit Rock Pop	T287	Power Rock	T371	Organ Quick Step	T455	Happy Reggae2
T36	RockPop	T120	Disco Funk	T204	60's Vintage Rock	T288	Acoustic Rock	T372	Piano Boogie	T456	6-8Slow Rock2
T37	Skiffle	T121	Disco Hands	T205	Chart Rock Shfl1	T289	Cool 8 Beat	T373	Lovely Shuffle	T457	Bolero Lento2
T38	Funk Pop Rock	T122	Disco Party	T206	60's Pop Rock	T290	Uptempo 8Beat	T374	Jazz Gtr Club	T458	Midnight Swing2
T39	Contemp Rock	T123	Disco Samba	T207	German Rock	T291	90's Rock Ballad	T375	Modern Jazz	T459	French Jazz2
T40	Acoustic Rock	T124	UK Pop	T208	Schlager Beat	T292	60's Guitar Pop	T376	Acoustic Jazz	T460	Latin Party Pop2
T41	60's RockN	T125	Club Dance	T209	Rock & Roll	T293	70's 8 Beat	T377	Cool Jazz Ballad	T461	Tango5
T42	Standard Rock	T126	Modern R&B	T210	Rock & Roll Shfl	T294	90's Guitar Pop	T378	Modern Jazz Bld	T462	Tango6
T43	Brit Rock Pop	T127	Hip Shuffle	T211	Oldies R & R	T295	Soft Rock	T379	Easy Listening	T463	Parranda2
T44	60's Vintage Rock	T128	Charleston	T212	60's Rock & Roll	T296	Chart Guita rPop	T380	Bebop	T464	80's Pop2
T45	Chart Rock Shfl	T129	DiscoPop	T213	Brit Pop	T297	Guijira	T381	Orch Big Band1	T465	60's Soul2
T46	60's Pop Rock	T130	DiscoSoul	T214	Chart Rock Shfl2	T298	Modern Pop Bld	T382	Kool Funk	T466	Fusion Shuffl3
T47	Waltz	T131	DiscoTrot	T215	New R&B	T299	Soul	T383	Blueberry Blues	T467	Fusion Shuffl4
T48	Cha Cha	T132	EuroBeat	T216	Pop R&B	T300	Skiffle	T384	Shuffle Blues	T468	6-8 Modern2
T49	Rumba	T133	Rap	T217	Chart R&B	T301	6-8Soul	T385	Mambo 3	T469	6-8 Orchestral2
T50	Jive	T134	Rave	T218	Rock Cha Cha	T302	Soul Brothers	T386	Mambo 4	T470	Slow Soul2
T51	Pasodoble	T135	70's Disco Funk	T219	Funk Shuffl 3	T303	6-8Slow Rock	T387	Big Band Fast1	T471	Piano Ballad2
T52	Samba 1	T136	Disco Philly	T220	8 Beat Rock3	T304	Trance Pop	T388	Orchestra Swing1	T472	Hip Hop Groove2
T53	Samba 2	T137	Disco House	T221	Rock Cha Cha2	T305	Mellow Hip Hop	T389	Orchestra Swing2	T473	Hip Shuffle2
T54	Schlager Rock 1	T138	80's Disco	T222	Joropo	T306	Classic Hip Hop	T390	70's Chart Cntry	T474	Organ Groove2
T55	Schlager Rock 2	T139	70's Disco1	T223	Reggaeton	T307	New Hip Hop	T391	Jazz Waltz Med	T475	Chart Pop3
T56	FoxTrot	T140	70's Disco2	T224	French Waltz	T308	Duranguense	T392	Mariachi Waltz	T476	Mambo5
T57	Viennese Waltz	T141	Country 1	T225	Merengue	T309	70's Disco1	T393	US March	T477	Mambo6
T58	Tango1	T142	Country 2	T226	Tango3	T310	70's Disco2	T394	Guitar Rumba	T478	Disco Latin2
T59	Tango2	T143	Finger Pickin	T227	Tango4	T311	Latin Disco	T395	Slow Blues	T479	Fast Bossa2
T60	German Waltz	T144	Country Brothers	T228	Jig	T312	Brazilian Samba	T396	Jazz Waltz Fast	T480	Fox Trot2
T61	Carnival	T145	New Country	T229	Hawaiian	T313	Brit Pop Swing	T397	70's Country Pop	T481	Pasodoble2
T62	Organ Samba	T146	Easy Country	T230	Electronica	T314	Grupera	T398	Dixieland	T482	Highland Waltz2
T63	Reel	T147	70's Chart Cntry	T231	Funky House	T315	Danzon	T399	40's Big Band	T483	Schlager Polka2
T64	Gay Gordons	T148	Hoedown	T232	Club Beat	T316	Dream Dance	T400	Schlager Alp	T484	Grupera2
T65	Scand Waltz	T149	Country Shuffle	T233	Retro Club	T317	US Chart Hit	T401	Chart Pop1	T485	Danzon2
T66	Salsa	T150	Country Ballad	T234	Mod Chart Pop	T318	Soul R&B	T402	Organ Groove	T486	Schlager Alp2
T67	Calypso	T151	Country Two Step	T235	MOR Swing	T319	R&B Soul Ballad	T403	Chart Pop2	T487	Saeidy2
T68	GuadDance	T152	Big Band Shuffle 1	T236	Retro Pop	T320	Euro Hip Hop	T404	Modern Shuffle	T488	6-8 March
T69	Reggae12Beat	T153	Big Band Shuffle 2	T237	Rumba Flamenco	T321	Trip Hop	T405	8 Beat Ballad1	T489	Bluegrass
T70	Reggae16Beat	T154	Big Band Shuffle 3	T238	Cumbia	T322	Saeidy	T406	Bubblegum Pop	T490	Pop Latin2
T71	Bossanova	T155	Fast Band 1	T239	Parranda	T323	Bhajan	T407	Rock Shuffle	T491	Show Tune2
T72	Mambo 1	T156	Fast Band 2	T240	Carnival2	T324	Hip Hop Groove	T408	West Coast Pop	T492	Scand Shuffle
T73	Mambo 2	T157	Cat Groove	T241	50's Pop	T325	Euro Trance	T409	Classic 16 Beat	T493	Worship Slow
T74	Bolero	T158	Dixie Jazz	T242	Groovy Pop	T326	6-8 Trance	T410	8 Beat Ballad2	T494	Bachata
T75	Cumbia	T159	Medium Jazz	T243	Cool Pop	T327	Latin DJ's	T411	Chillout	T495	Romantic Ballad2
T76	Latin Rock	T160	Jazz Big Band	T244	Club Pop2	T328	Bomba	T412	16 Beat Ballad1	T496	Analog Ballad2
T77	Disco Latin	T161	Jazz Club	T245	16 Beat Pop2	T329	Club House	T413	Epic Ballad	T497	Electro Pop2
T78	Tijuana	T162	Ragtime	T246	8 Beat Pop2	T330	House	T414	Easy Ballad	T498	Blues Rock2
T79	Reggae	T163	Frankly Soul	T247	8 Beat Soul2	T331	Disco Teens	T415	Cuban Son	T499	90's Soul
T80	Pop Mambo	T164	Jazz Funk	T248	8 Beat Rock2	T332	Happy Reggae	T416	16 Beat Ballad3		
T81	Latin Party Pop	T165	Classic Big Band	T249	60's Vintage Pop	T333	Pop Latin	T417	Contemp Rock2		
T82	Cumbia	T166	French Jazz	T250	16 Beat Ballad2	T334	Fast Bossa	T418	EP Ballad2		
T83	Parranda	T167	Jump Jive	T251	70's Pop Ballad	T335	6-8 Modern	T419	Cat Groove2		