

SP-88S

88 Key Digital Keyboard Piano

 
OWNER'S MANUAL

CONTENT

Introduction	01
Control Panel	01
Rear Panel	01
Brief introduction	01
Setting Up	02
Power On/Off	02
Master Volume	02
Install the Music Rest	02
Operating Instructions	02
Selecting a Tone	02
Selecting a Rhythm	02
Listening to the Demo Songs	02
Metronome	02
Adjusting the Tempo	02
Adjusting the Touch Sensitivity.....	03
Transpose Function	03
Layering Two Voice (Dual Mode)	03
Splitting the Keyboard (Split Mode)	03
Playing the Drum Kit Voices	03
Auto Accompaniment	03
Sync	04
Adding a Fill-in passage	04
Quick Recording and Playback	04
Bluetooth Mode	04
Security Warning	04
Appendix-80 Demonstration songs	05
Appendix-198 Tones	06
Appendix-198 Rhythms	07
Appendix-Single Chord	08
Appendix-Fingered Chord	09


INTRODUCTION

CONTROL PANEL

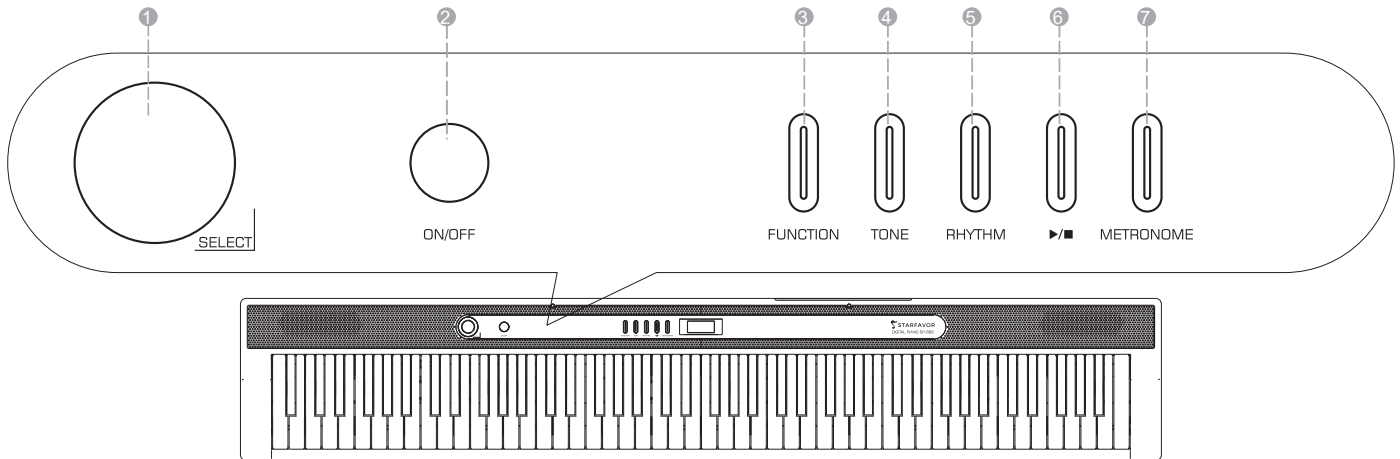

- ① **Select Knob:** This Knob is used to adjust the master volume and select the content as you like.
- ② **Power :** This button is used to turn the instrument on and off.
- ③ **Function:** While holding down this button, press the appropriate key on the keyboard to make various settings.
- ④ **Tone:** Pressing this button will enter the Tone selection mode.
- ⑤ **Rhythm:** Pressing this button will enter the rhythm selection mode.
- ⑥ **Start/Stop:** This button is used to play and stop the rhythm.
- ⑦ **Metronome:** This button is used to turn the instrument's metronome function on/off, and adjust the beat tempo.

 REAR PANEL

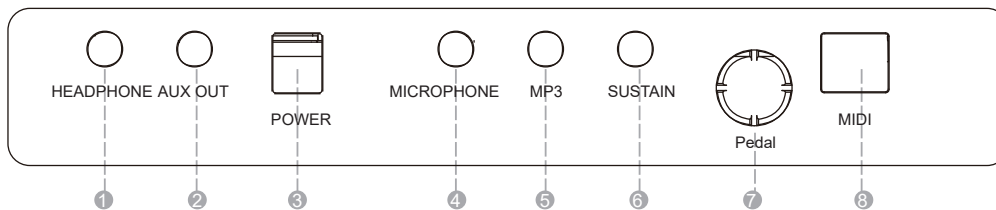

- ① **Headphone Jack:** This jack is used to connect headphone with the 3.5mm plug.
- ② **Aux Out Jack:** This jack is used to connect external speakers with a 3.5mm audio cable.
- ③ **Power Jack:** This jack is used to connect the AC power adapter, please use the 5V adapter, otherwise the product may be damage.
- ④ **Microphone Jack:** This jack is use to connect a dynamic microphone with a 3.5mm plug.
- ⑤ **MP3 Jack:** This jack is used to connect to external instrument's audio, with a 3.5mm audio cable.
- ⑥ **Sustain pedal Jack:** This Jack is used to connect the single sustain pedal.
- ⑦ **Pedal Jack:** This jack is used to connect a triple pedal (self-provide) with the 3.5mm plug.
- ⑧ **MIDI Jack:** This jack is used to connect a computer or a smart device with a USB-MIDI cable.

BRIEF INTRODUCTION

Content	Data
Keyboard	88 Full-Size Keys
Pitch Range	A2~C5
Tone	198
Rhythm	198
Demo	80
Function	Split keyboard, Dual tone, Drum key, Auto chord mode, Quick recording, Bluetooth.
Adjust	Touch, Speed, Tempo, Volume
Connecting	Headphone, Microphone, Sustain, Triple-Pedal, Audio Out, MP3
Battery	3.7V 1800mAh

SETTING UP

Power On/Off

Connect the AC adapter or remove the power adapter to use the built-in battery. The USB cable can also charge the built-in battery.

Do not charge the battery for a long time please.

Master Volume

 
The knob can adjust the master volume and use to be other function selection. After turning on, it defaults to adjust master volume.

The volume range from 0-16 levels, the default volume for startup is 12 levels.

After select the other function with select knob, you can press the knob to back to the volume mode, then the screen showing "VOL".

Install the Music Rest

Insert the music rest on the instrument as shown.

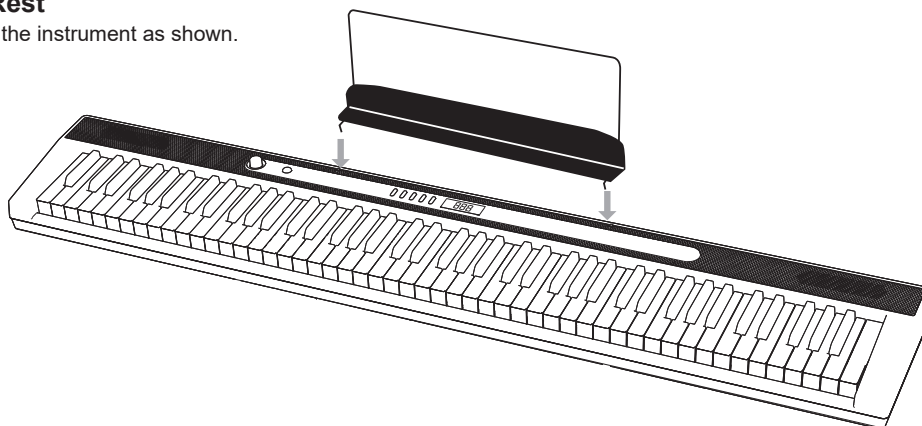

OPERATING INSTRUCTIONS

Selecting a Tone

Press the button [Tone], you can enter the tone select mode after the button light on, then use the knob to choose the tone you like.

The SP-88S digital piano features 198 built-in advanced tones, you can check the detail in the appendix list.

Selecting a Rhythm

Press the button [▶/■] can play the rhythm directly.

Press the button [Rhythm], you can enter the rhythm select mode after the button light on. then use the knob to choose the rhythm you like, and press [▶/■] to start the music.

The SP-88S digital piano features 198 built-in advanced rhythms, you can check the detail in the appendix list.

 
Listening to the Demo Songs

The SP-88S digital piano features 80 built-in demo songs.

Press and hold the [Function] button, then press [B2] key on the keyboard to start the demo songs, then use the knob to choose the demo song you like, and press [▶/■] button to stop the song.



FUNCTION

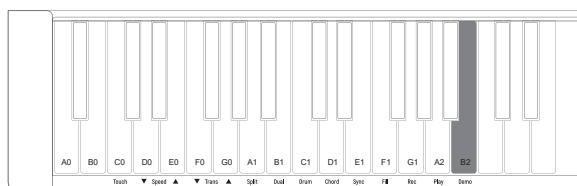

Metronome

Press the button [Metronome] to turn on the built-in metronome after the button light on.

Press the button [Metronome] again to change the beat from 1/4, 2/4, 3/4, 4/4.

 
Press the button [▶/■] to stop the metronome.

Adjusting the Tempo


Turn on the Metronome.

Press and hold the [Function] button, then press [D0] or [E0] key on the keyboard to adjust the tempo of the metronome. The speed range is

The tempo can also use in rhythm mode and demo mode.




FUNCTION

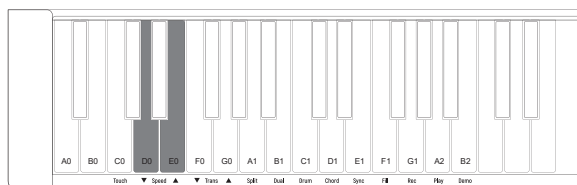 


Adjusting the Touch Sensitivity

 Press and hold the [Function] button, then press [C0] key on the keyboard to turn on/off the touch mode.

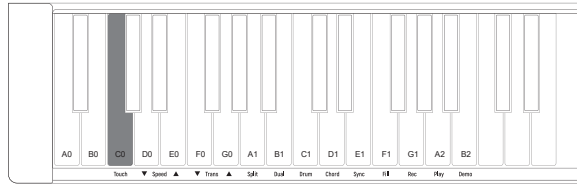

Transpose Function

 Press and hold the [Function] button, then press [F0] or [G0] key on the keyboard to adjust the value between -12 and +12.

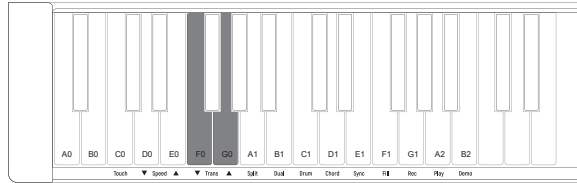


Layering Two Voice (Dual Mode)

Select the desired tone which will be designated as Voice1.

Press and hold the [Function] button, then press [B1] key on the keyboard to choose Voice2, and turn on the Dual mode.

 Press and hold the [Function] button, and press [B1] key again to turn off the Dual mode.


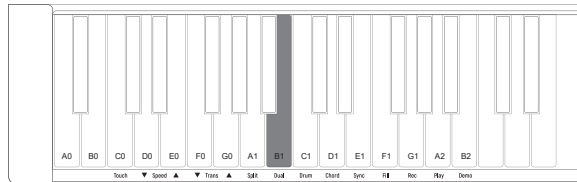


Splitting the Keyboard (Split Mode)

Press and hold the [Function] button, then press [A1] key on the keyboard to turn on the Split mode.

When the Split model is active, the keyboard will be divided into two separate areas, and the split point default setting E4 key.

  
Press and hold the [Function] button, and press [A1] key again to turn off the Split mode.

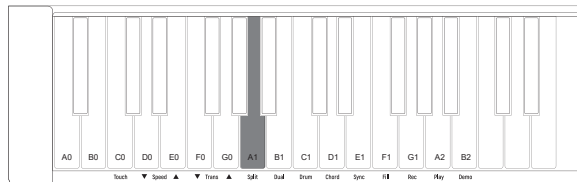

Playing the Drum Kit Voices

Press and hold the [Function] button, then press [C1] key on the keyboard to turn on the Drum key mode.

 Press and hold the [Function] button, and press [C1] key again to turn off the Drum key mode.

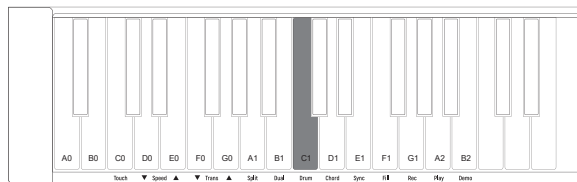


Auto Accompaniment

Press and hold the [Function] button, then press [D1] key on the keyboard to turn on the Auto chord mode.

The default setting split point is F#3

 Press and hold the [Function] button, and press [D1] key again to turn off the Auto chord mode.

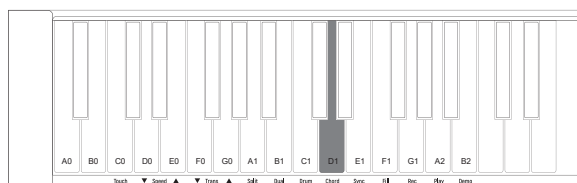


Sync


Press and hold the [Function] button, then press [E1] key on the keyboard to turn on the sync mode.

The sync function is used to start the rhythm when you press any key of the keyboard, which instead of press the [▶/■] Button, allowing you to star your performance more comfortably.

 Press and hold the [Function] button, and press [E1] key again to turn off the sync mode.




FUNCTION

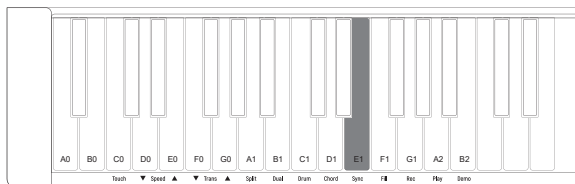 


Adding a Fill-in passage

This function needs to be used in rhythm mode.

 Press and hold the [Function] button, then press [F1] key on the keyboard to add a fill-in passage. If you want to fill-in again, repeat this action.




FUNCTION

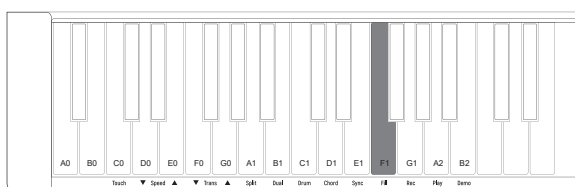 


Quick Recording and Playback

Press and hold the [Function] button, then press [G1] key on the keyboard to turn on the Recording mode. At that time, the piano can record the notes you are playing, it can record the max 2000 notes or drum notes.

 After completing the recording, press and hold the [function] button, then press [A2] Key to play back the recorded song.




FUNCTION

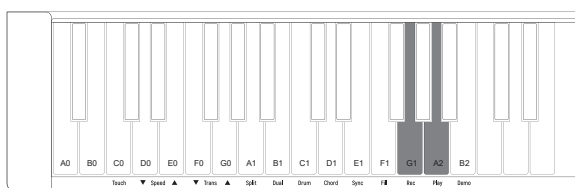 

Bluetooth Mode

Included Bluetooth Audio & Bluetooth MIDI.

 Bluetooth Name: **GAUT-MUSIC**.

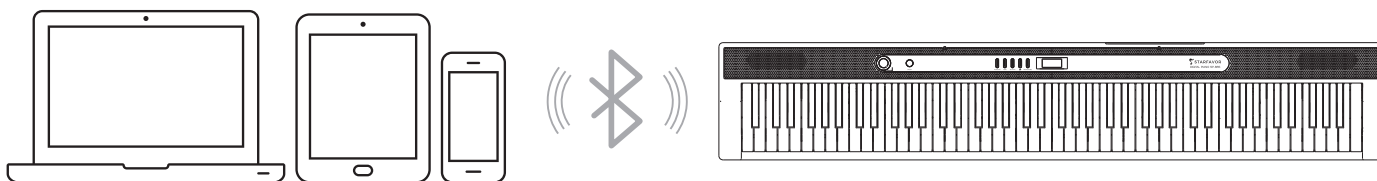

SECURITY WARNING

- This piano has a large built-in function. If there is no response to the function, you can restart the product and try again.
- When the product emits smoke, odor, or overheating, please stop using it. Otherwise, there may be a risk of fire and electric shock. If the above situations occur, please take the following measures:
 1. Turn off the power and immediately unplug the power plug.
 2. Contact our after-sales email immediately.
- Please do not expose the product to extreme environments such as extreme heat, cold, or humidity, as this may cause damage to the product.
- This product is not suitable for infants and young children under three years old.

APPENDIX-80 DEMONSTRATION SONGS

S000	Ecossaise	S022	Dog Waltz	S044	Weddingindream	S066	CarribeanCruise
S001	Romance de amor	S023	Violin humorism	S045	Neptuninthemistyforest	S067	DannyBoy
S002	Storm	S024	Serenade	S046	Thefirstsnowinmistyforest	S068	EveningFalls
S003	Breit	S025	Serenade Haydn	S047	Jardinsecret	S069	JanaGanaMana
S004	Walnut Box Dance	S026	Petite Valse	S048	Sadorhappy	S070	MoonlightSonata
S005	Gorgeous Waltz	S027	Hungarian Dance No	S049	ACommamour	S071	OnceaCanadianLad
S006	Ode to joy	S028	For Alice	S050	Attilinabythewater	S072	RockSolidBlues
S007	Galois	S029	Concerto of love	S051	Memoriesofchildhood	S073	SeeHowtheNightArrives
S008	Army Polish dance	S030	Love story	S052	Bachgammon	S074	ToreadorfromCarmen
S009	Carman Overture	S031	Annie's Song	S053	Vanessa'ssmile	S075	AupresdemaBlonde
S010	La defski March	S032	Annie's Wonderland	S054	Starrysky	S076	AveMaria
S011	The Blue Danube	S033	Chunye	S055	Thedreamofsnow	S077	Beethoven'sFifthSymphony
S012	Green sleeves	S034	The melody of memory	S056	Wildbeesflying	S078	Brahms'Lullaby
S013	My hometown	S035	The sound of silence	S057	Musicboxdancer	S079	CrippleCreek
S014	Fountain	S036	Jazz to Alice	S058	Danceofireflies		
S015	Beer Barrel Polka	S037	Casablanca	S059	Romanticrainynight		
S016	Maiden's Prayer	S038	Croatian Rhapsody	S060	AirdelaPetiteRussie		
S017	Notre Dame	S039	Wilderness	S061	Notebook		
S018	Schubert piano sonatas	S040	Rhapsody in blue	S062	Rondino		
S019	Turkey March	S041	Romantic season	S063	Sonatina		
S020	Spanish Matador	S042	Crystallake	S064	AmazingGrace		
S021	Minuet	S043	Beautiful Jazz	S065	BigBadGoblinBlues		

APPENDIX-198 TONES

T000	Piano 1	T040	Violin	T080	Lead 1 (square)	T120	Guitar Fret Noise	T160	Electric Guitar (jazz)
T001	Piano 2	T041	Viola	T081	Lead 2 (sawtooth)	T121	Breath Noise	T161	Electric Guitar (clean)
T002	Piano 3	T042	Cello	T082	Lead 3 (calliope lead)	T122	Seashore	T162	Electric Guitar (muted)
T003	Honky-Tonk Piano	T043	Contrabass	T083	Lead 4 (chiff lead)	T123	Bird Tweet	T163	Overdriven Guitar
T004	Rhodes Piano	T044	Tremolo Strings	T084	Lead 5 (charang)	T124	Telephone Ring	T164	Distortion Guitar
T005	Chorused Piano	T045	Pizzicato Strings	T085	Lead 6 (voice)	T125	Helicopter	T165	Guitar Harmonics
T006	Harpsichord	T046	Orchestral Harp	T086	Lead 7 (fifths)	T126	Applause	T166	Acoustic Bass
T007	Clavinet	T047	Timpani	T087	Lead 8 (bass+lead)	T127	Gun shot	T167	Electric Bass(finger)
T008	Celesta	T048	String Ensemble 1	T088	Pad 1 (new?age)	T128	PIPA	T168	Electric Bass(pick)
T009	Glockenspiel	T049	String Ensemble 2	T089	Pad 2 (warm)	T129	PIPA TRM	T169	Fretless Bass
T010	Music Box	T050	SynthStrings 1	T090	Pad 3 (polysynth)	T130	LUAN	T170	Slap Bass
T011	Vibraphone	T051	SynthStrings 2	T091	Pad 4 (choir)	T131	GUZHEN	T171	Slap Bass
T012	Marimba	T052	Choir Aahs	T092	Pad 5 (bowed)	T132	ERHUVB	T172	Synth Bass
T013	Xylophone	T053	Voice Oohs	T093	Pad 6 (metallic)	T133	FLUTE	T173	Synth Bass
T014	Tubular Bells	T054	Synth Voice	T094	Pad 7 (halo)	T134	Acoustic Grand Piano	T174	Violin
T015	Santur	T055	Orchestra Hit	T095	Pad 8 (sweep)	T135	Bright Acoustic Piano	T175	Viola
T016	Hammond Organ	T056	Trumpet	T096	FX 1 (rain)	T136	Electric Grand Piano	T176	Cello
T017	Percussive Organ	T057	Trombone	T097	FX 2 (soundtrack)	T137	Honky-Tonk Piano	T177	Contrabass
T018	Rock Organ	T058	Tuba	T098	FX 3 (crystal)	T138	Rhodes Piano	T178	Tremolo Strings
T019	Church Organ	T059	Muted Trumpet	T099	FX 4 (atmosphere)	T139	Chorused Piano	T179	Pizzicato Strings
T020	Reed Organ	T060	French Horn	T100	FX 5 (brightness)	T140	Harpsichord	T180	Orchestral Harp
T021	Accordion	T061	Brass Section	T101	FX 6 (goblins)	T141	Clavinet	T181	Timpani
T022	Harmonica	T062	Synth Brass 1	T102	FX 7 (echoes)	T142	Celesta	T182	String Ensemble
T023	Bandoneon	T063	Synth Brass 2	T103	FX 8 (sci-fi)	T143	Glockenspiel	T183	String Ensemble
T024	Acoustic Guitar (nylon)	T064	Soprano Sax	T104	Sitar	T144	Music Box	T184	SynthStrings
T025	Acoustic Guitar(steel)	T065	Alto Sax	T105	Banjo	T145	Vibraphone	T185	SynthStrings
T026	Electric Guitar (jazz)	T066	Tenor Sax	T106	Shamisen	T146	Marimba	T186	Choir Aahs
T027	Electric Guitar (clean)	T067	Baritone Sax	T107	Koto	T147	Xylophone	T187	Voice Oohs
T028	Electric Guitar (muted)	T068	Oboe	T108	alimba	T148	Tubular Bells	T188	Synth Voice
T029	Overdriven Guitar	T069	English Horn	T109	Bagpipe	T149	Santur	T189	Orchestra Hit
T030	Distortion Guitar	T070	Bassoon	T110	Fiddle	T150	Hammond Organ	T190	Trumpet
T031	Guitar Harmonics	T071	Clarinet	T111	Shanai	T151	Percussive Organ	T191	Trombone
T032	Acoustic Bass	T072	Piccolo	T112	Tinkle Bell	T152	Rock Organ	T192	Tuba
T033	Electric Bass(finger)	T073	Flute	T113	Agogo	T153	Church Organ	T193	Muted Trumpet
T034	Electric Bass(pick)	T074	Recorder	T114	Steel Drums	T154	Reed Organ	T194	French Horn
T035	Slap Bass 1	T075	Pan Flute	T115	Woodblock	T155	Accordion	T195	Brass Section
T036	Slap Bass 2	T076	Bottle Blow	T116	Taiko Drum	T156	Harmonica	T196	Synth Brass
T037	Synth Bass 1	T077	Skakuhachi	T117	Melodic Tom	T157	Bandoneon	T197	Synth Brass
T038	Synth Bass 2	T078	Whistle	T118	Synth Drum	T158	Acoustic Guitar (nylon)		
T039	Violin	T079	Ocarina	T119	Reverse Cymbal	T159	Acoustic Guitar(steel)		

APPENDIX-198 RHYTHMS

R000	Beguines Wing	R040	Pop Swing	R080	Funky2	R120	Horse	R160	16Bit3
R001	Beguine2	R041	Easy Swing	R081	Dixie1	R121	Canon	R161	16bit4
R002	Beguine3	R042	Soft Swing	R082	Dixie2	R122	Latin	R162	Ballad_16T2
R003	Pop hit	R043	Rock1	R083	Foxtrot1	R123	Mambo	R163	Country_16T2
R004	Pop	R044	Rock2	R084	Foxtrot2	R124	New age	R164	Tango3
R005	Pop Malay	R045	Rock3	R085	R.roll1	R125	Slow rc	R165	Tango4
R006	Bossa nova	R046	Airy Rock	R086	R.roll2	R126	Soul	R166	Polka3
R007	Disco1	R047	Heart Rock	R087	Fast Beat	R127	Twist	R167	Polka4
R008	Disco2	R048	Rock & Roll	R088	Quick Beat	R128	Beguine4	R168	Pop Swing2
R009	Blue grass disco	R049	Urban Rock	R089	Smooth Beat	R129	Beguine5	R169	Easy Swing2
R010	Waltz1	R050	Ballad	R090	Square Beat	R130	Beguine6	R170	Soft Swing2
R011	Waltz12	R051	Jazz Ballad	R091	Euro Beat	R131	Pop hit2	R171	Rock4
R012	True ballad waltz	R052	C.Ballad	R092	Alpha Dance	R132	Pop2	R172	Rock5
R013	Bossa Waltz	R053	J.Ballad	R093	Beta Dance	R133	Pop Malay2	R173	Rock6
R014	Easy Waltz	R054	60s Slow Ballad	R094	Dream Dance	R134	Bossa nova2	R174	Airy Rock2
R015	Shuffle Waltz	R055	Piano Ballad	R095	Dance1	R135	Disco3	R175	Heart Rock2
R016	Reggae Waltz	R056	50s Ballad	R096	Dance2	R136	Disco4	R176	Rock & Roll2
R017	Rumba Waltz	R057	Snake Base	R097	Dance3	R137	Blue grass disco2	R177	Urban Rock2
R018	1-Mar	R058	Happy Blues	R098	RAP	R138	Waltz13	R178	Ballad2
R019	March2	R059	Old Blues	R099	The Country	R139	Waltz14	R179	Jazz Ballad2
R020	Rumba1	R060	Blue Gras	R100	Country Shuffle	R140	True ballad waltz2	R180	C.Ballad2
R021	Rumba2	R061	Boodie1	R101	Electric Keys	R141	Bossa Waltz2	R181	J.Ballad2
R022	Slow1	R062	Boodie2	R102	Dark Keys	R142	Easy Waltz2	R182	60s Slow Ballad2
R023	Slow2	R063	Boodie3	R103	Easy Walk	R143	Shuffle Waltz2	R183	Piano Ballad2
R024	Disco cha cha	R064	Shuffle1	R104	Destiny	R144	Reggae Waltz2	R184	50s Ballad2 5
R025	Guala cha	R065	Shuffle2	R105	Comedy	R145	Rumba Waltz2	R185	Snake Base2
R026	Char	R066	Dream Shuffle	R106	Drive	R146	March3	R186	Happy Blues2
R027	Samba1	R067	Country Shuffle	R107	Liquid Nova	R147	March4	R187	Old Blues2
R028	Samba2	R068	Quick Shuffle	R108	Indonesian folk	R148	Rumba3	R188	Blue Gras2
R029	Ubminimal	R069	Reggae Shuffle	R109	Absolute Music	R149	Rumba4	R189	Boodie4
R030	8Bit1	R070	R&B	R110	Jamaica	R150	Slow3	R190	Boodie5
R031	8Bit2	R071	Reggae1	R111	Synthesis	R151	Slow4	R191	Boodie6
R032	16Bit1	R072	Regg	R112	Feel	R152	Disco cha cha2	R192	Shuffle3
R033	16bit2	R073	Reggae3	R113	Accelerate	R153	Guala cha2	R193	Shuffle4
R034	Ballad_16T	R074	Salsa1	R114	Beach Night	R154	Char2	R194	Dream Shuffle2
R035	Country_16T	R075	Salsa2	R115	Irish	R155	Samba3	R195	Country Shuffle2
R036	Tango1	R076	Salsa3	R116	Tarantella	R156	Samba4	R196	Quick Shuffle2
R037	Tango2	R077	Tecno1	R117	Big band	R157	Ubminimal2	R197	Reggae Shuffle2
R038	Polka1	R078	Tecno2	R118	Dan	R158	8Bit3		
R039	Polka2	R079	Funky1	R119	Fusion	R159	8Bit4		

APPENDIX-SINGLE CHORD

C 	Cm 	C7 	Cm7
C# 	C#m 	C#7 	C#m7
D 	Dm 	D7 	Dm7
D# 	D#m 	D#7 	D#m7
E 	Em 	E7 	Em7
F 	Fm 	F7 	Fm7
F# 	F#m 	F#7 	F#m7
G 	Gm 	G7 	Gm7
G# 	G#m 	G#7 	G#m7
A 	Am 	A7 	Am7
A# 	A#m 	A#7 	A#m7
B 	Bm 	B7 	Bm7

APPENDIX-FINGERED CHORD

C 	Cm 	C7 	Cm7
C# 	C#m 	C#7 	C#m7
D 	Dm 	D7 	Dm7
D# 	D#m 	D#7 	D#m7
E 	Em 	E7 	Em7
F 	Fm 	F7 	Fm7
F# 	F#m 	F#7 	F#m7
G 	Gm 	G7 	Gm7
G# 	G#m 	G#7 	G#m7
A 	Am 	A7 	Am7
A# 	A#m 	A#7 	A#m7
B 	Bm 	B7 	Bm7



Starfavor



Facebook



Youtube

 <https://www.facebook.com/StarfavorMusicFB/>

 [youtube.com/@Starfavormusic](https://www.youtube.com/@Starfavormusic)

 starfavoraftersales@gmail.com

<https://www.starfavormusic.com>
