

REVERIE GRAND

88 Key Digital Piano Instruction Manual



Contents

- Precautions 1
- Installation 3
- Introduction/Control Panel 5
- Bottom panel 7
- Multifunctional operation guide 9
- Bluetooth Mode 13
- Specification 14

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe and handy place for future reference.

⚠ WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Power supply/AC adaptor

- Do not place the power cord near heat sources such as heaters or radiators. Also, do not excessively bend or otherwise damage the cord, or place heavy objects on it.
- Only use the voltage specified as correct for the instrument. The required voltage is printed on the name plate of the instrument.
- Use the specified adaptor only. Using the wrong adaptor can result in damage to the instrument or overheating.
- Use only the supplied power cord/plug.
- Check the electric plug periodically and remove any dirt or dust which may have accumulated on it.

Do not open

- This instrument contains no user-serviceable parts. Do not open the instrument or attempt to disassemble or modify the internal components in any way. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified STARFAVOR service personnel.

Water warning

- Do not expose the instrument to rain, use it near water or in damp or wet conditions, or place on it any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. If any liquid such as water seeps into the instrument, turn off the power immediately and unplug the power cord from the AC outlet. Then have the instrument inspected by qualified STARFAVOR service personnel.
- Never insert or remove an electric plug with wet hands.

Fire warning

- Do not put burning items, such as candles, on the unit. A burning item may fall over and cause a fire.

Influences on electro-medical devices

- Radio waves may affect electro-medical devices.
- Do not use the product near medical devices or inside areas in which the use of radio waves is restricted.
- Do not use this product within 15cm (6 in.) of persons with a heart pacemaker or defibrillator implant.

If you notice any abnormality

- When one of the following problems occur, immediately turn off the power switch and disconnect the electric plug from the outlet. Then have a contact with STARFAVOR service personnel.
 - The power cord or plug becomes frayed or damaged.
 - It emits unusual smells or smoke.
 - Some object has been dropped into the instrument.
 - There is a sudden loss of sound during use of the instrument.
 - If any cracks or breakages exist on the instrument.

Location

- Do not place the instrument in an unstable position where it might accidentally fall over.
- When transporting or moving the instrument, always use two or more people. Attempting to lift the instrument by yourself may damage your back, result in other injury, or cause damage to the instrument itself.
- Before moving the instrument, remove all connected cables, to prevent damage to the cables or injury to anyone who might trip over them.
- If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet. Even when the power switch is turned off, electricity is still flowing to the product at the minimum level. When you are not using the product for a long time, make sure to unplug the power cord from the wall AC outlet.

Connections


- Before connecting the instrument to other electronic components, turn off the power for all components. Before turning the power on or off for all components, set all volume levels to minimum.
- Be sure to set the volumes of all components at their minimum levels and gradually raise the volume controls while playing the instrument to set the desired listening level.

Handling caution

- Do not insert a finger or hand in any gaps on the instrument.
- Never insert or drop paper, metallic, or other objects into the gaps on the panel or keyboard. This could cause physical injury to you or others, damage to the instrument or other property, or operational failure.
- Do not rest your weight on, or place heavy objects on the instrument, and do not use excessive force on the buttons, switches or connectors.

STARFAVOR cannot be held responsible for damage caused by improper use or modifications to the instrument, or data that is lost or destroyed.

Installation

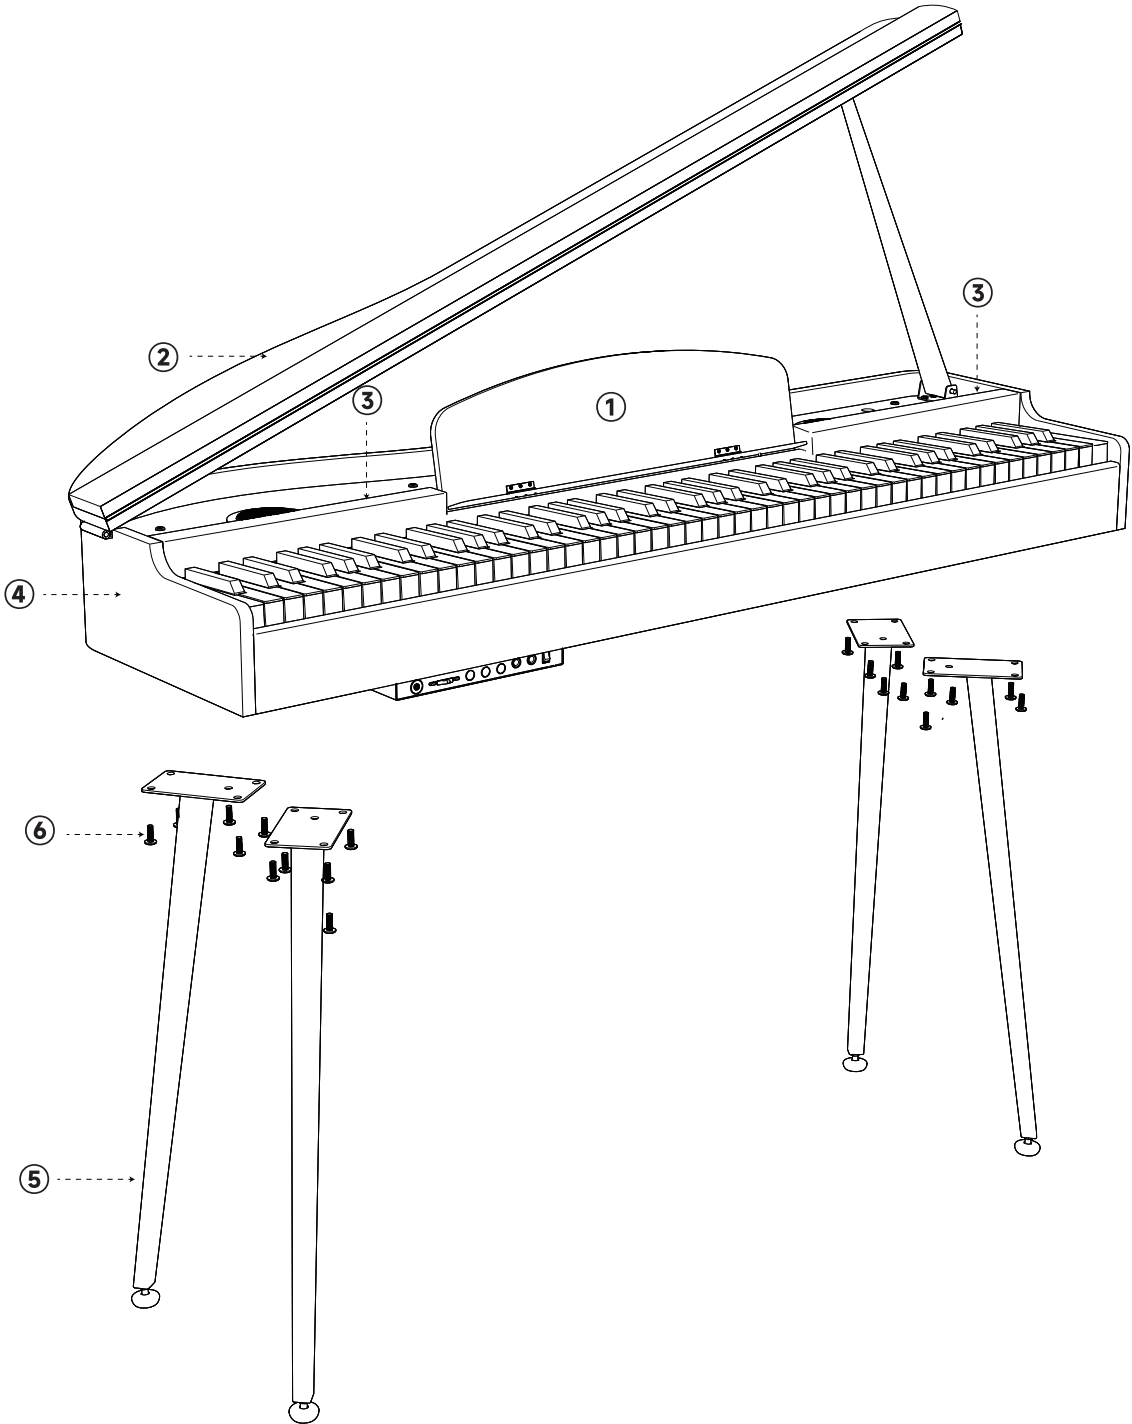

① Music Sheet
④ Piano Body

② Piano Lid
⑤ Piano Legs


③ Ambient Light
⑥ 20PIC Screws

Piano Lid Instruction:


REVERIE GRAND's piano lid structure simulates the design of a grand piano, allowing players to experience the subtle differences in the sound of the piano in both open and closed states.

The preset sound effects in the open and closed states are different, and can be adjusted according to personal preferences and actual playing environment. You can also customize and adjust the sound effect (environmental sound effect), and the default sound effect will be restored after the instrument restarts.

Open:

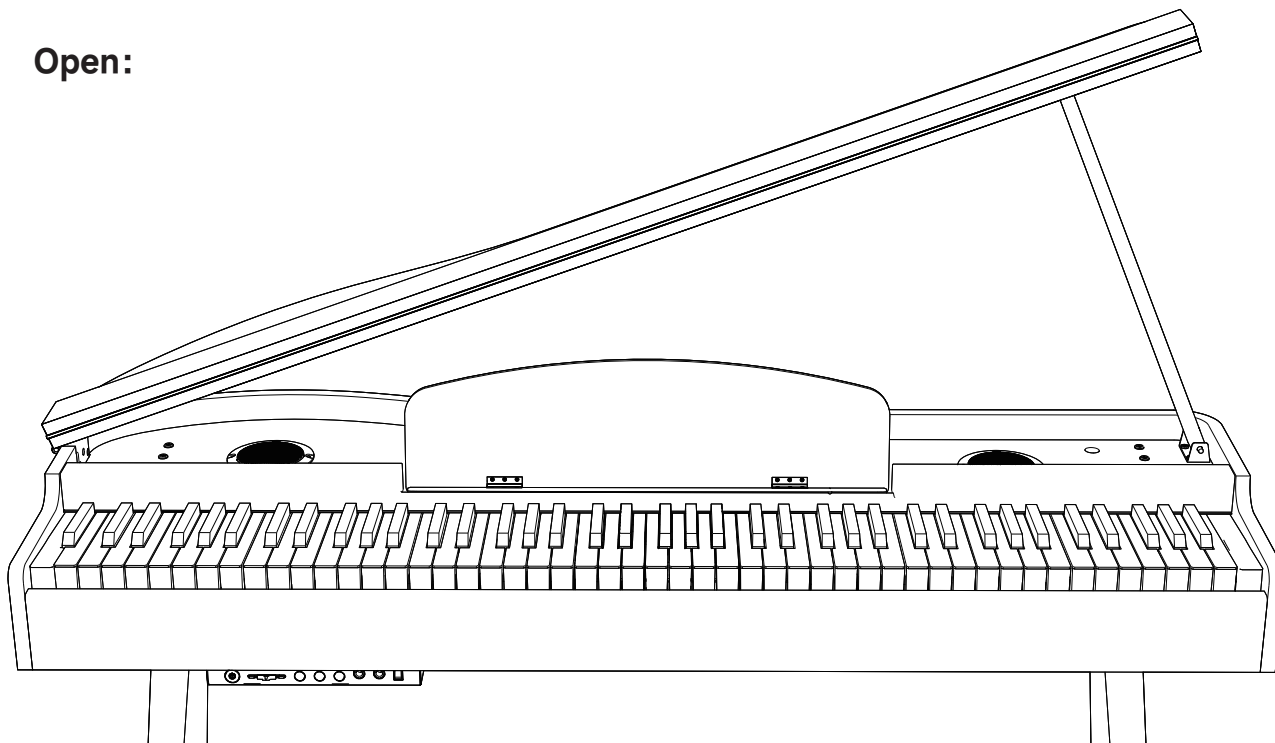

Close:

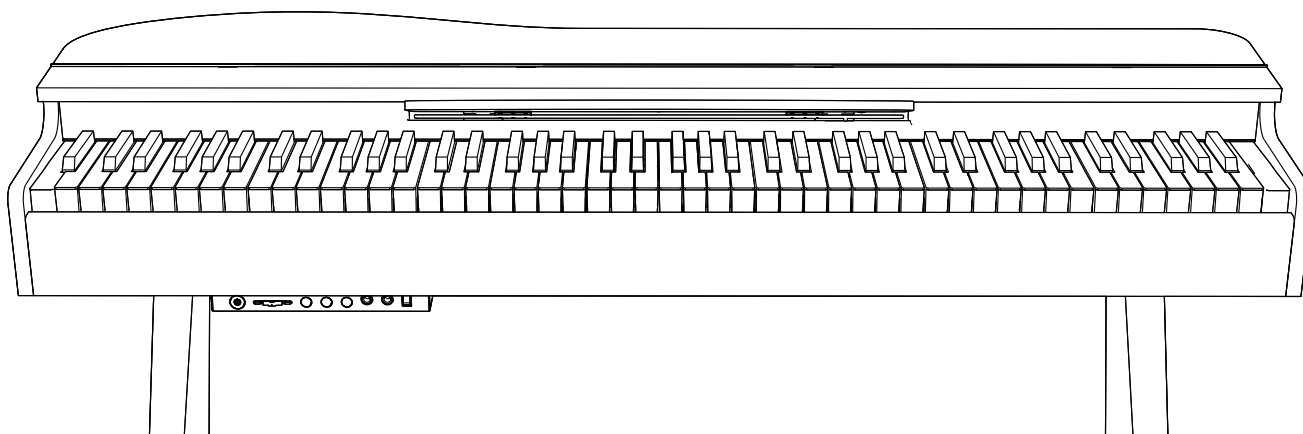

CAUTION

Be careful when using the piano lid to avoid hurt your fingers

Introduction/Control Panel



Turn on/off power:

This button controls the startup and shutdown of the product.

After restarting, all parameters return to their default state. Please turn off the power when not in use temporarily

Adjusting the Master Volume:

Use the volume bar to control the master volume.

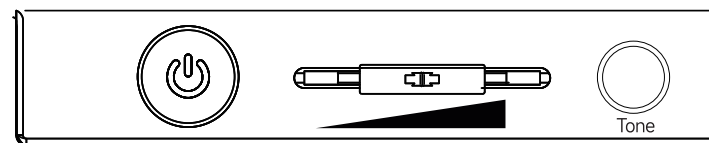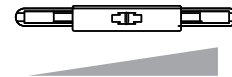

Function:

This button is to turn on the other function which is combine with keys. For detailed operations, see P9-P13.

Headphone Mode:

For connecting a set of stereo headphones with a stereo 6.35mm plug.


Before using the headphones, be sure to set the volume of the instrument at the minimum level. Then gradually raise the volume while playing the instrument, for your ear comfort and safety. The speakers of the instrument are automatically shut off when a headphones plug, etc. is inserted into this jack.

Selecting the Keyboard Sound (Voice) :

Press this button you will enter the sound select mode, the default voice is 001 Grand piano sound. Press again to choose your favorite sound. There are 5 wonderful voices in the sound select mode, see P9 to check the tone list

Selecting the keyboard demo song :

Press this button you will enter the song select mode. Press the button again to enjoy your favorite sound. Long press to stop the song, see P10 to check the tone list.

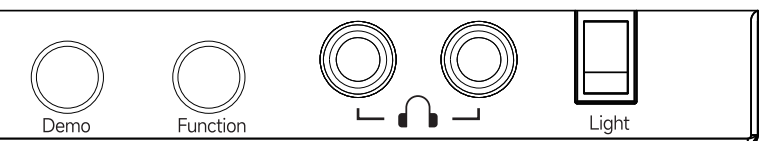

Ambient Light Control:

This button is to turn on/off the ambient light.


⚠ If you can't hear any sound or the sound is too soft, try the following:

- Increase the volume
- Disconnect the headphones from the PHONES/OUTPUT terminal.
- Check if the power socket is securely plugged in.
- Reset the piano.
- Contact us.

Bottom panel


MP3 Jack:

This jack is used to connect to external instrument's audio, with a 3.5mm audio cable.

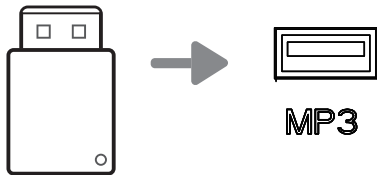


MIDI Jack

This jack is used to connect a computer or a smart device with a USB-MIDI cable.

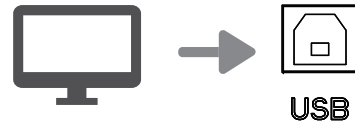


Triple-pedal jack

This button is use to connect the triple-pedal.

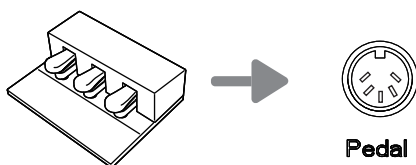

Sustain pedal Jack:

This Jack is used to connect the single sustain pedal.

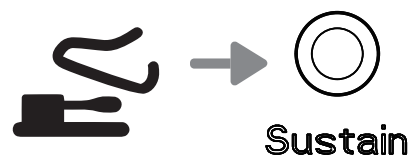



Aux in jack:

The external sound source can be connected to the electric piano for playing through a 6.35mm audio input plug.




Aux Out Jack:

Aux Out Jack: This jack is used to connect external speakers with a 6.35mm audio cable.

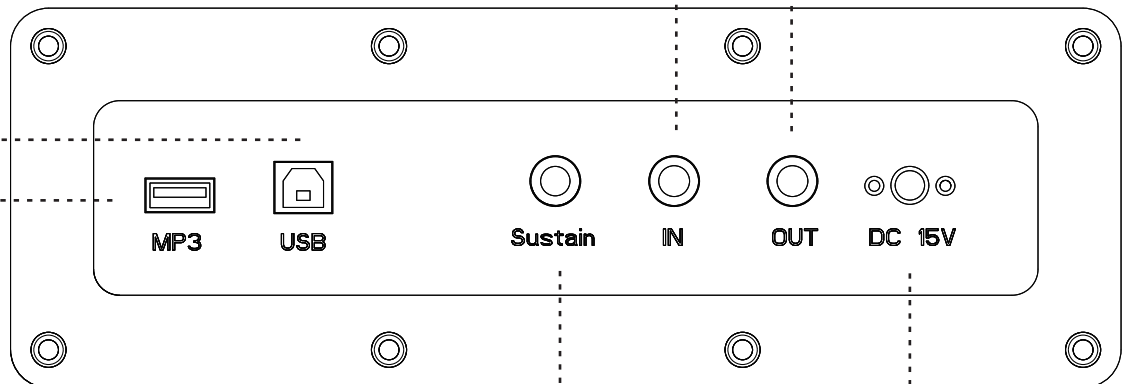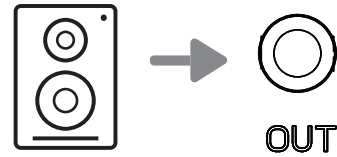

Power adapter socket


Please use the original power adapter in the packaging and ensure that the voltage range is between 100V-220V, otherwise it may cause damage to the instrument.

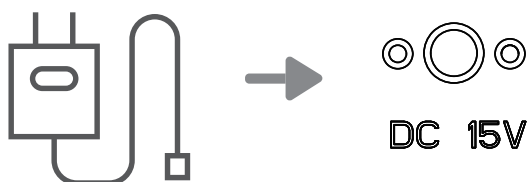

Multifunctional operation guide

Function ● + Keys


To turn on the detail setting, hold down the [Function] button, and then simultaneously press the appropriate key on the keyboard.

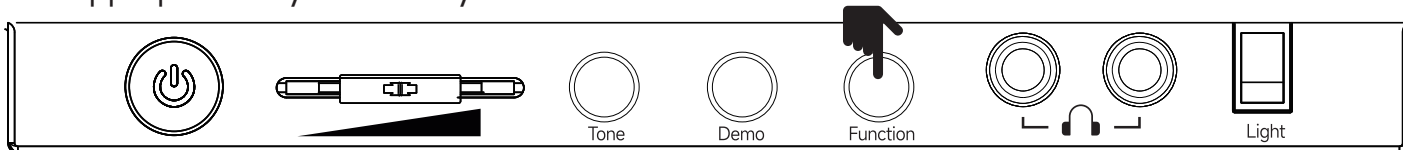

Choose a voice directly:

Press and hold the [function] button, then press the key [C0-G0] to choose your favorite sound.

No	Key combinations	Sound
1	Function+C ₀	Acoustic Grand Piano
2	Function+D ₀	Rhodes Piano
3	Function+E ₀	Bass
4	Function+F ₀	Church organ
5	Function+G ₀	Violin

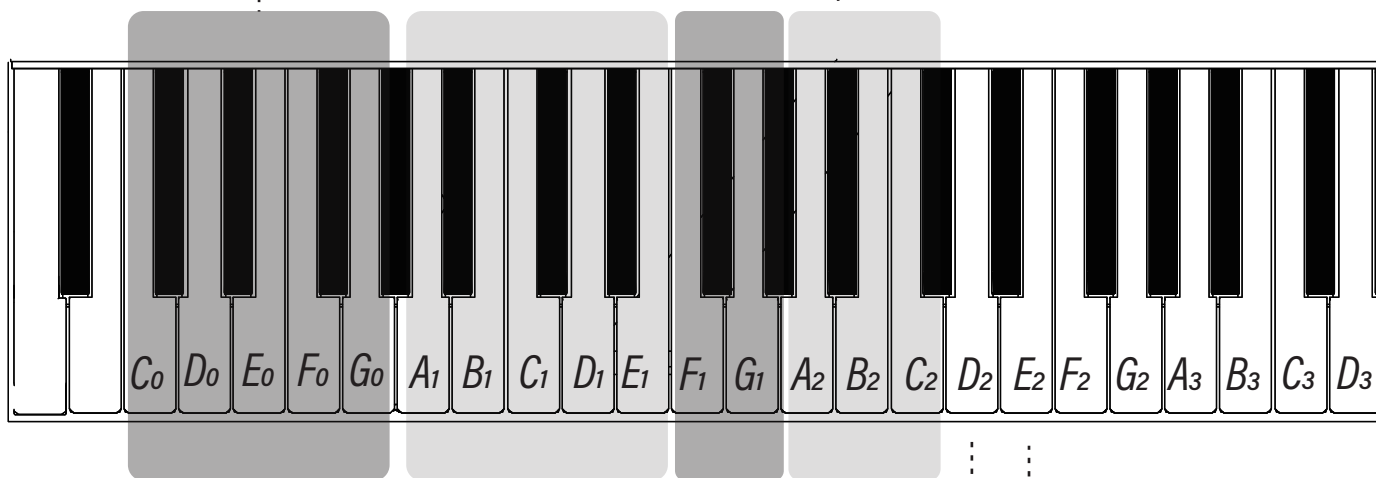


Transpose:

Changes the pitch of the instrument in semi-tones, for playing in different keys. Range: -12-00-12

Splitting the Keyboard (Split Mode)

Press and hold the [Function] button, then press [D2] key on the keyboard to turn on the Split mode. When the Split model is active, the keyboard will be divided into two separate areas, and the split point default setting E4 key. Press and hold the [Function] button, and press [D2] key again to turn off the Split mode.

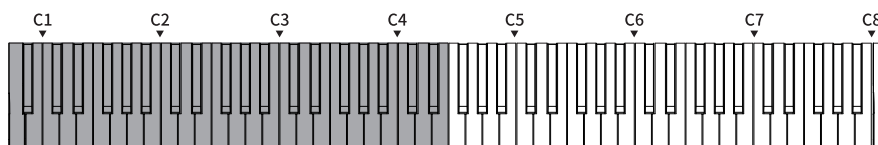

Choose a demo song directly:

Press and hold the [function] button, then press the key [A1-E1] to choose your favorite song

No	Key combinations	Demo song
1	Function+A ₁	PERELUDE III
2	Function+B ₁	PERFECT HAPPINESS
3	Function+C ₁	RANDO CAPRICCIO
4	Function+D ₁	CHOPIN:ETUDE IN CMINOR Op.10 No.12
5	Function+E ₁	WALTZ IND FLAT, OP. 64 NO.1

Touch Response:


Hold down the [Function] button, and then simultaneously press the key [A2-C2]. Determines how the sound responds to your playing strength.

Rang: Soft/standard/strong

Soft: Produces relatively high volume even with light playing.

Standard: Produces a fairly “standard” keyboard response.

Strong: The keys must be played very strongly to generate loud volume.


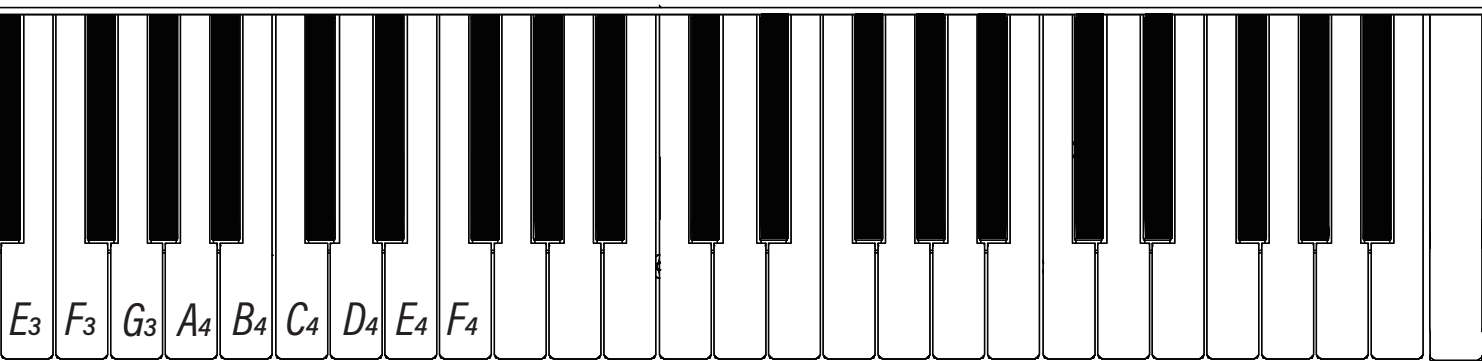


Layering Two Voice (Dual Mode)

- Select the desired tone which will be designated as Voice1.
- Press and hold the [Function] button, then press [E₂] key on the keyboard to choose Voice2, and turn on the Dual mode.
- Press and hold the [Function] button, and press [E₂] key again to turn off the Dual mode.

Function ● + Keys

To turn on the detail setting, hold down the [Function] button, and then simultaneously press the appropriate key on the keyboard.

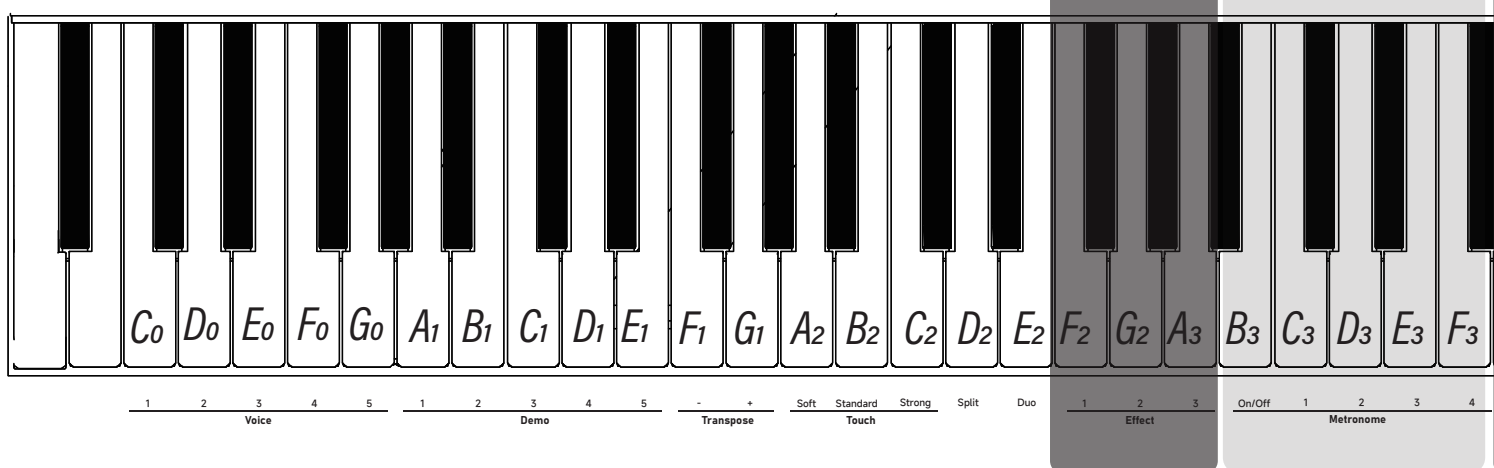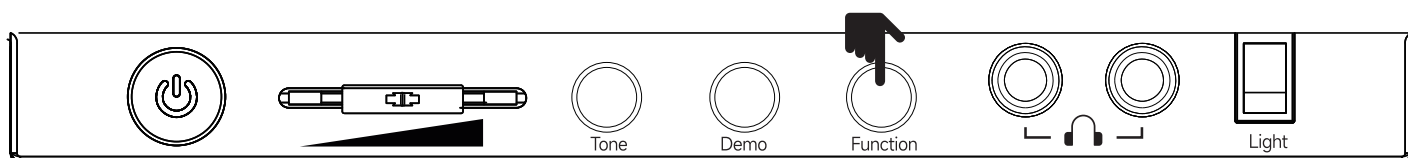

Metronome

The metronome feature is convenient for practicing with an accurate tempo. While holding down [function], press B₃ key to start/stop the Metronome. You can also holding down [function] and press C₃-F₃ to change the tempo type.

Key	Tempo Type
C ₃	1/4
D ₃	2/4
E ₃	3/4
F ₃	4/4

Adjusting the Tempo


The Metronome tempo can be set from 30 to 280. Holding down [Function], press G₃ or A₄ to speed up or slow down the tempo.

Adding environment Variations to the Sound (Reverb)

This instrument features 3 Reverb Types that add extra depth and expression to the sound to create a realistic acoustic ambience. While holding down [Function], press one of the F2-A3 keys to add the reverb types.

Reverb Type List

Key	Reverb Type
F ₂	Church
G ₂	Concert Hall
A ₃	Studio

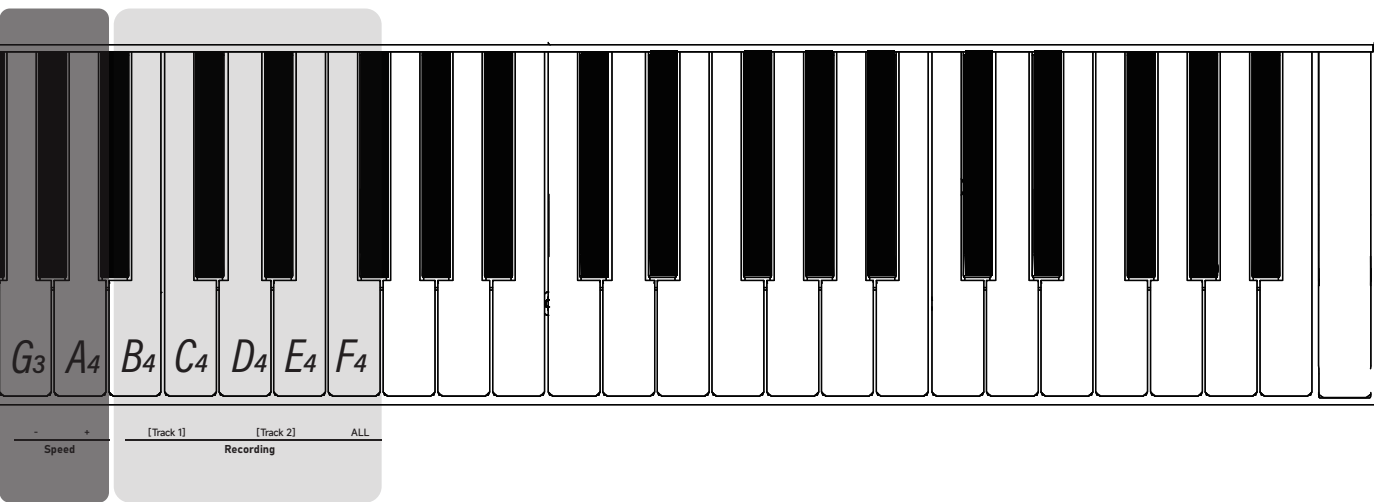

Recording Your Performance

This instrument lets you record your keyboard performance as the User Song. Up to two tracks can be recorded separately.

- Track 1: While holding down [Function], press the B₄ key to start/stop record track 1. To hear the recorded song, holding down [Function], press C₄ key to start playback track 1.
- Track 2: While holding down [Function], press the D₄ key to start/stop record track 2. To hear the recorded song, holding down [Function], press E₄ key to start playback track 2.
- To hear the ensemble of the 2 tracks, holding down [Function], and press F₄ to start playback track 1 and 2 at the same time. (The recording capacity is about 5000 notes, including pedal operation, tone change, reverb change, etc.)

Bluetooth Mode

This instruments included the Bluetooth MIDI and Bluetooth Audio function.


Bluetooth MIDI: Name:**REVERIE-MIDI**

You can search for the Bluetooth name of your device in the Bluetooth connection option in the music editing software or mobile teaching app. After connecting, you can wireless transmit the MIDI signal of the piano.

Bluetooth Audio: Name:**REVERIE-AUDIO** :

You can play the sound of audio data saved in a Bluetooth-equipped device, such as a smartphone or portable audio player, on this instrument and listen to it through the built-in speaker of the instrument.

PIN CODE: 8888

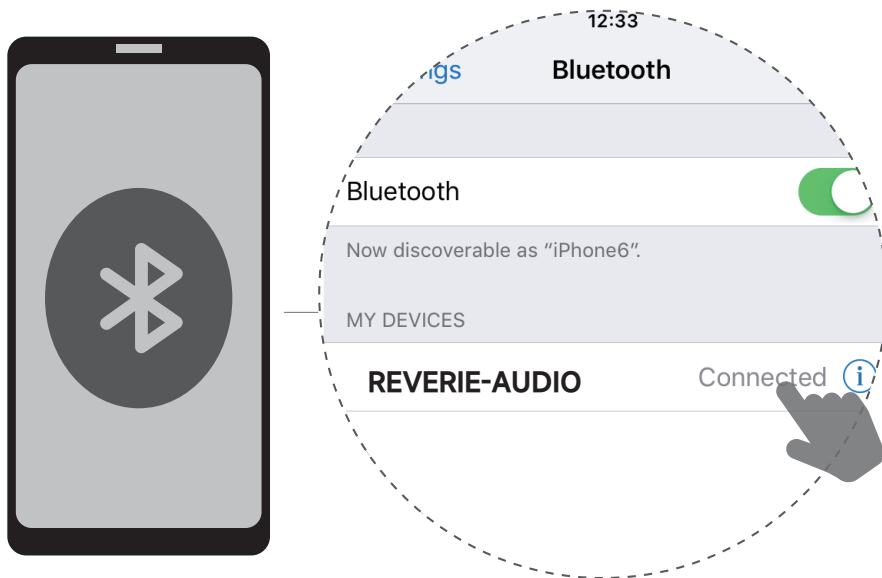

Specification

Produce name	Starfavor Digital Piano
Keyboard	88 keys weighted, hammer action
Touch curve	Soft/Standard/Strong
Tone	5 Tones
Demo song	5 Demos
Metronome	4 Types
Speed	30-280
Effect	3 Types
Split Mode	√
Duo Mode	√
Recording	2 tracks/5000 notes
Bluetooth Mode	Bluetooth MIDI & Bluetooth Audio
Speaker	25W*2+5W*2
Connectivity (Front)	6.35mm Standard stereo phone jack*2
Connectivity (Bottom)	Mp3 jack
	MIDI USB jack
	6.35mm Sustain Pedal jack
	Aux input jack
	Aux output jack
	DC IN (100V-220V)
	Triple-pedal jack
Included Accessories	Owner's Manual, Ac adaptor, Triple-pedal, Introduction card, Stickers, USB cable

About Starfavor

Starfavor was founded in 2019 by a group of descendants from a family of instrument craftsmen. Inspired by their fathers, they have a deep love for the music industry and aspire to uphold traditional craftsmanship while combining modern innovative technology to create new and exciting music equipment.



Youtube



Website



Facebook