


HOW TO SET UP 600 SERIES DRUM THRONE

- A) Open the tripod base of the drum stool and place it in an upright position.
- B) Place the drum stool seat on the threaded post.
- C) Press down vertically on the front of the saddle drum stool tightening the clips on the back of the seat frame to tighten first then the clips on the front.
- D) Rotate the top of the seat to turn the threaded shaft and adjust the seat to the height you want.
- E) Slide the memory lock on the drum stool threaded shaft towards the base ring, aligning it with the slot in the base.
- F) Tighten the memory lock to ensure that the drum stool height is fixed in position.
- G) Tighten the black wing nut and hex nut on the base clamp evenly.
- H) As an option, loosen the seat memory lock slightly to allow for some seat rotation while the drummer is playing.

HOW TO INSTALL THE DRUM STOOL BACKREST

- A) To attach the back support arm to the seat bracket, first remove the '1a' from the support arm
- B) Slide the support arm into the cushion seat plate. The open, small curved plate is placed on top of the slotted support arm area.
- C) Place this curved plate on the support arm so that the threaded holes align with the threaded plastic knobs and tighten to secure the seat plate and support arm.
- D) Adjust the desired depth and tighten the knob.
- E) To attach the backrest cushion to the back support arm, place the "C" shaped collar in the back slot of the support arm. Place the "C" shaped collar on the back slot of the support arm and align it and thread it into the backrest cushion.
- F) Adjust the cushion height and tighten the knob.

INSTALLING THE BACKREST

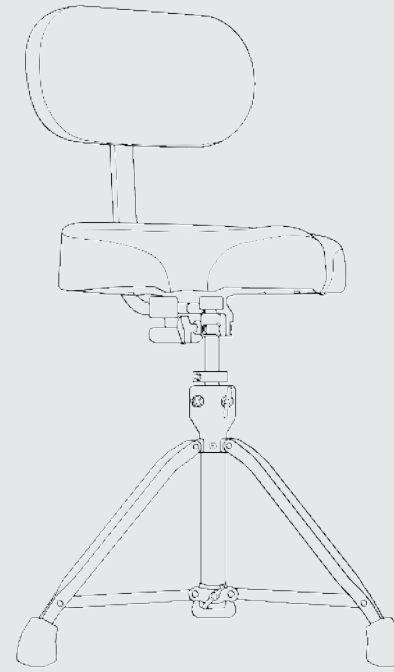

The final finished effect.

INSTALLING THE BACKREST



The disassembled L-shaped stick divided into ① and ②.



The ② is disassembled and divided into three parts a b c.




Fix "c" to the backrest with two screws.




Installing "b" and "L-shaped" bracket on "c" through "a".


INSTALL THE BOTTOM

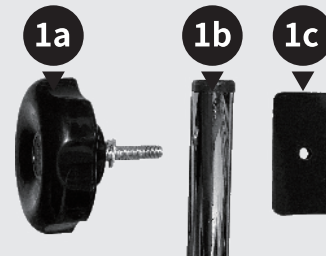

Split into ① "1a" "1b" and "1c"

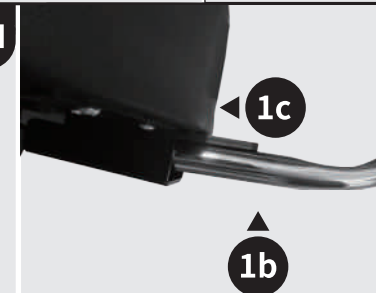

Place "1c" on top of "1b" and insert it into the base of the drum stool.

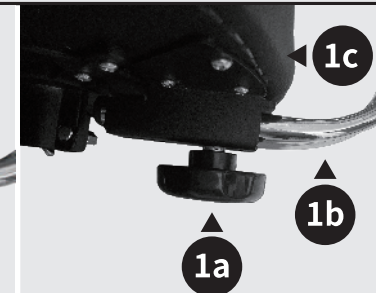

Use "1a" to fix "1b" and "1c" to the base of the drum stool.